



# Einhell

# EXPERT

## POWER X-CHANGE

Robot Lawn Mower

**FREELEXO+**

**Item No.: 3413950**

Ident No.: 11019

Bar Code: 4006825646757

The Einhell FREELEXO+ robot lawnmower from the Power-X-Change series can be combined with all system batteries. The FREELEXO+ is controlled via app or the intuitive keypad with LCD display. The operating time of the FREELEXO+ can be precisely programmed to the specific day. To protect it from theft the lawn robot has PIN code protection and a warning signal. It automatically returns to and gets charged up by the charging unit. Using the multi-zone mowing mode, this robot lawnmower is even suitable for complex gardens. The safety sensor system has impact, tilt and lift sensors. There is also an integrated rain sensor. The robot lawnmower has a cutting height adjustment facility between 20 mm and 60 mm and is suitable for inclines up to 35%.

## Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad with LCD display
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging




## Technical Data

- |                     |                         |
|---------------------|-------------------------|
| - Power             | 18 V                    |
| - Battery capacity  | 0 mAh                   |
| - Cutting width     | 18 cm                   |
| - Height adjustment | Continuously   20-60 mm |
| - max. slope        | 35 %                    |



## Logistic Data

- |                                      |                    |
|--------------------------------------|--------------------|
| - Product weight (kg)                | 14.5               |
| - Gross weight (kg)                  | 16.04              |
| - Dimensions single packaging        | 723 x 512 x 318 mm |
| - Pieces per export carton           | 1 Pieces           |
| - Gross weight of export carton      | 16.3 kg            |
| - Dimensions export carton           | 733 x 515 x 325 mm |
| - Container quantity (20"/40"/40"HC) | 236   495   566    |

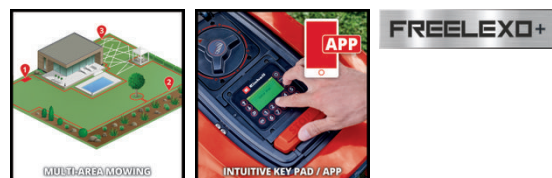

## Available as special accessories



18V 5,2 Ah P-X-C Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Cable Kit 500m2  
Robot Lawn Mower Accessory  
Item No.: 3414001  
Bar Code: 4006825646818  
Einhell Accessory



Cable Kit 700m2  
Robot Lawn Mower Accessory  
Item No.: 3414002  
Bar Code: 4006825646825  
Einhell Accessory



Cable Kit 900m2  
Robot Lawn Mower Accessory  
Item No.: 3414003  
Bar Code: 4006825646832  
Einhell Accessory



Installation Kit 500m2  
Robot Lawn Mower Accessory  
Item No.: 3414010  
Bar Code: 4006825646863  
Einhell Accessory



Cable Kit 1100m2  
Robot Lawn Mower Accessory  
Item No.: 3414004  
Bar Code: 4006825646849  
Einhell Accessory



Installation Kit 800m2  
Robot Lawn Mower Accessory  
Item No.: 3414011  
Bar Code: 4006825646870  
Einhell Accessory



Installation Kit 1200m2  
Robot Lawn Mower Accessory  
Item No.: 3414012  
Bar Code: 4006825646887  
Einhell Accessory



Ersatzklingen 12 Stk  
Robot Lawn Mower Accessory  
Item No.: 3414020  
Bar Code: 4006825648775  
Einhell Accessory



Begrenzungsdraht 50 m  
Robot Lawn Mower Accessory  
Item No.: 3414021  
Bar Code: 4006825648782  
Einhell Accessory



Verbindungsklemmen 4 Stk  
Robot Lawn Mower Accessory  
Item No.: 3414022  
Bar Code: 4006825648799  
Einhell Accessory



Befestigungshaken 100 Stk  
Robot Lawn Mower Accessory  
Item No.: 3414023  
Bar Code: 4006825648805  
Einhell Accessory



18V 2,0 Ah Power-X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0 Ah Power-X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 30min Power X-Change  
Charger  
Item No.: 4512011  
Bar Code: 4006825587029  
Einhell Accessory



Power-X-Boostcharger 6 A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



Power-X-Twincharger 3 A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 3,0 Ah PXC Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 4-6 Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



2x 3,0Ah & 30min PXC Kit  
PXC-Starter-Kit  
Item No.: 4512098  
Bar Code: 4006825646986  
Einhell Accessory



18V 3,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512041  
Bar Code: 4006825613698  
Einhell Accessory



18V 4,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory