 


LUMAR ECKMODUL 115X115X68cm

 
BAHAG:31965561


 


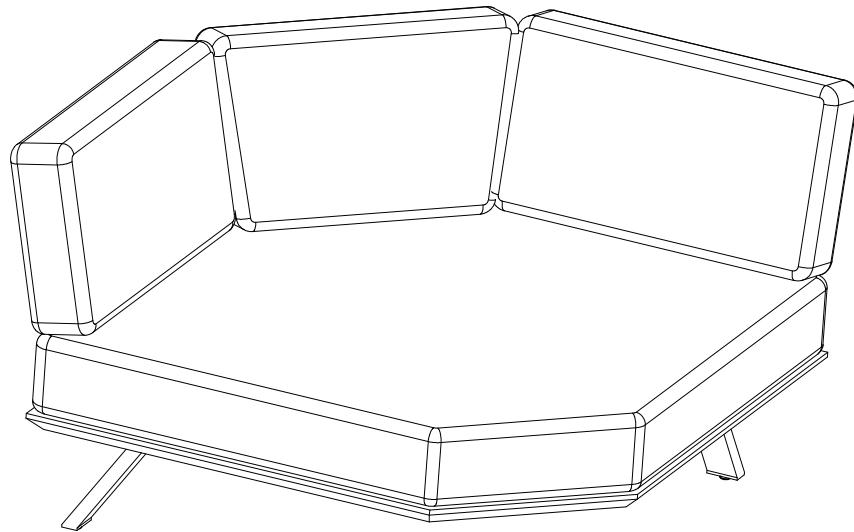 



 
 
 



2

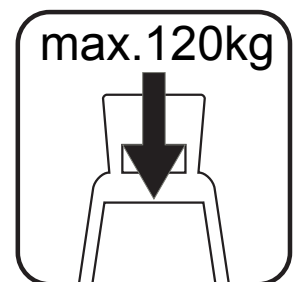 


25 min

 


A		1
B		3
C		3
D		3
E	 M6*25	26
F	 M6*28	12
G		12
H		1
K		4
L		1
M		2
N		1

 
01

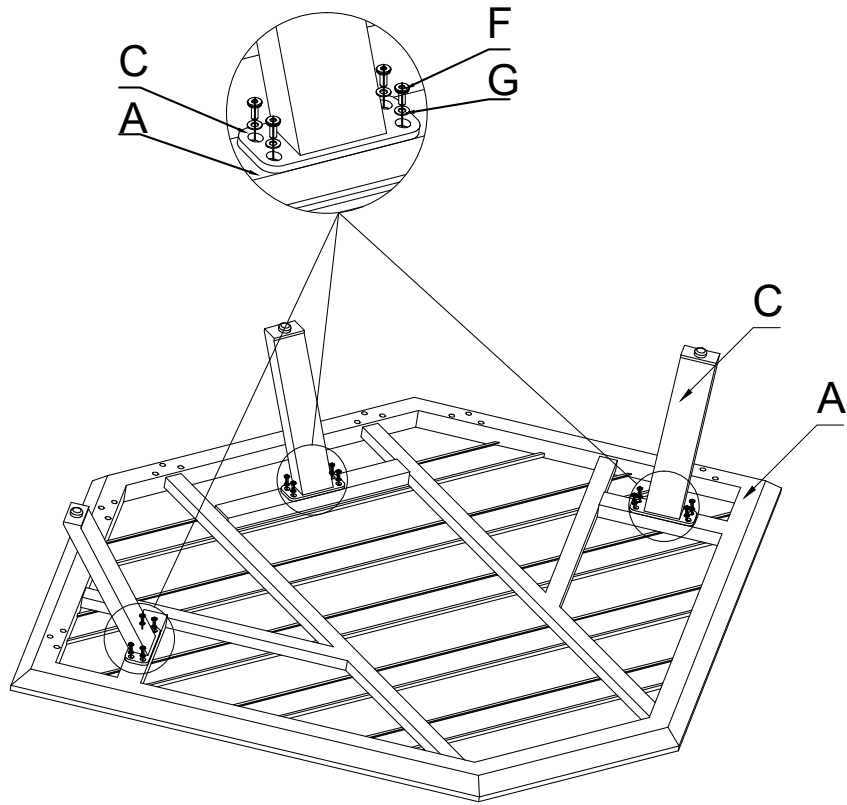

 
02

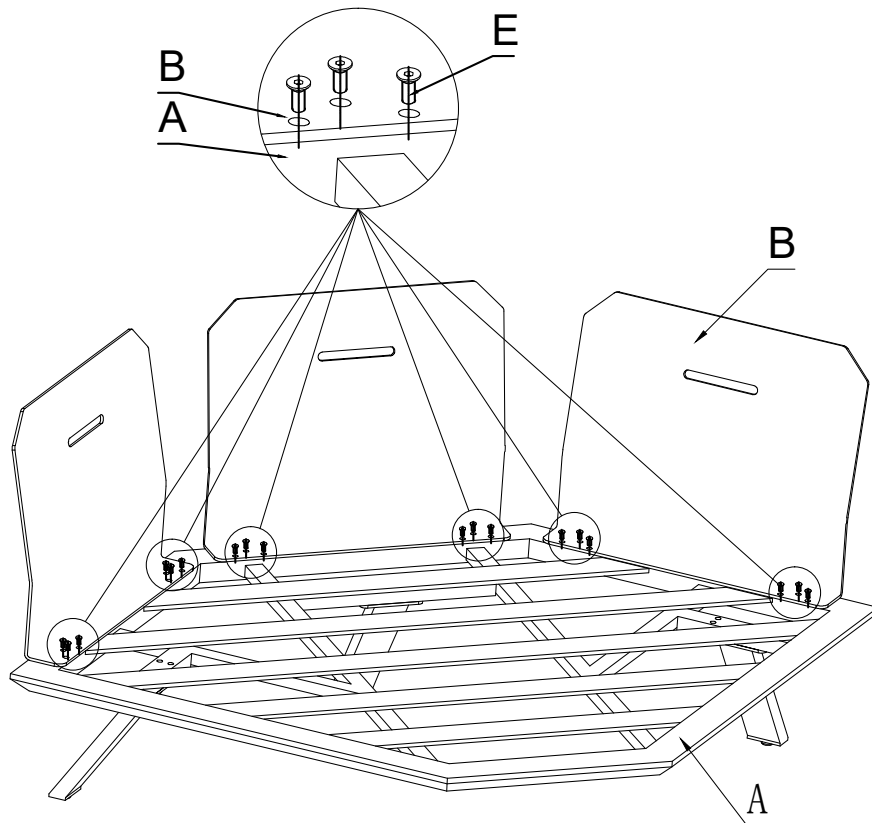

 
 

 
 
 
03

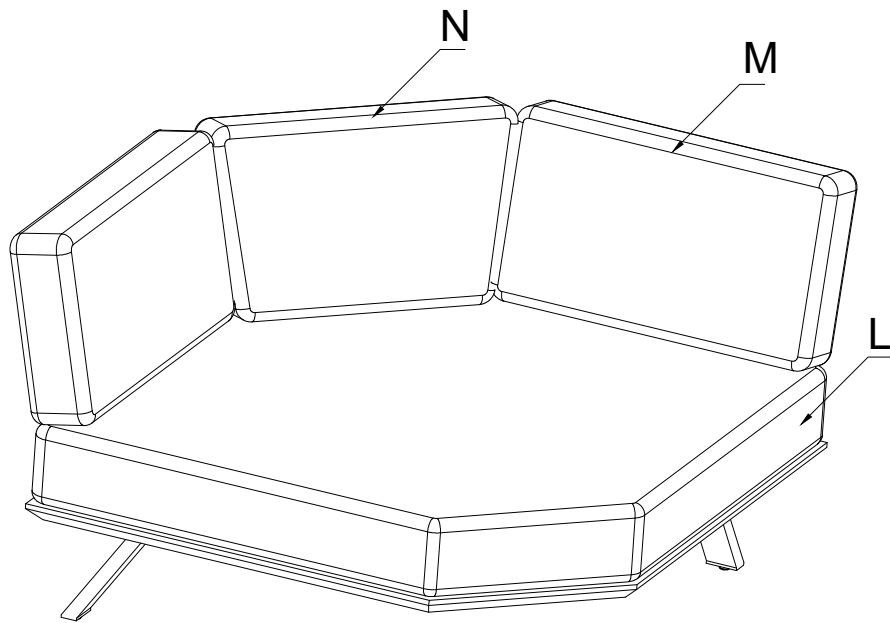

 
04

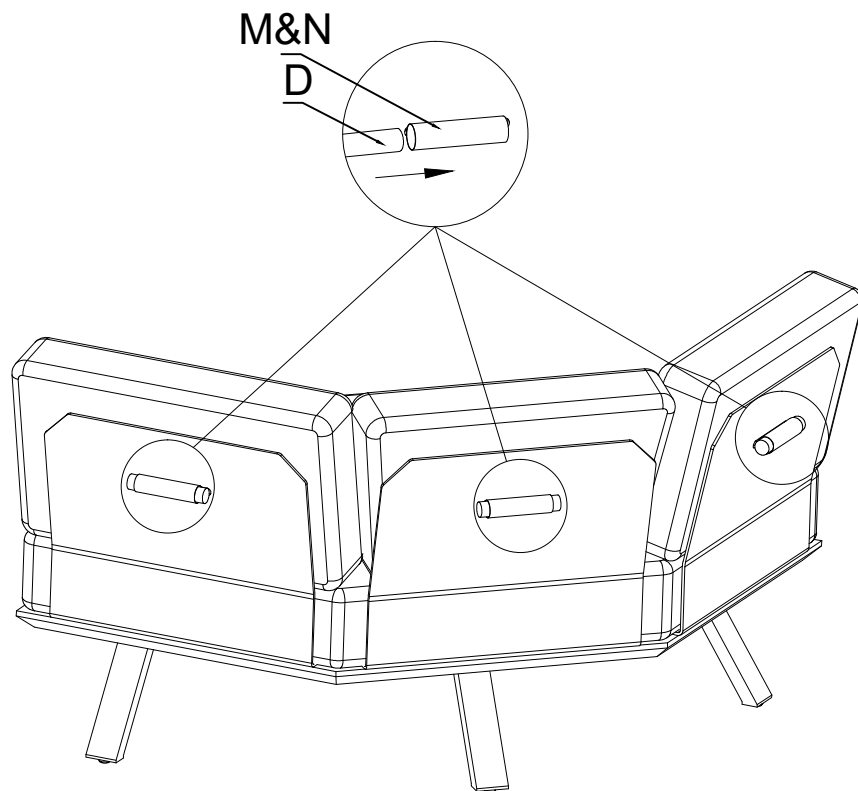

 
Wenn Sie Artikel 31970060 und 31991159 kaufen, befolgen Sie bitte die folgenden Schritte.

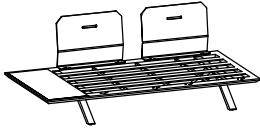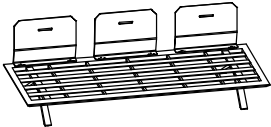O		1
P		1
Q		1
I		5
J		5
D		5

 
05

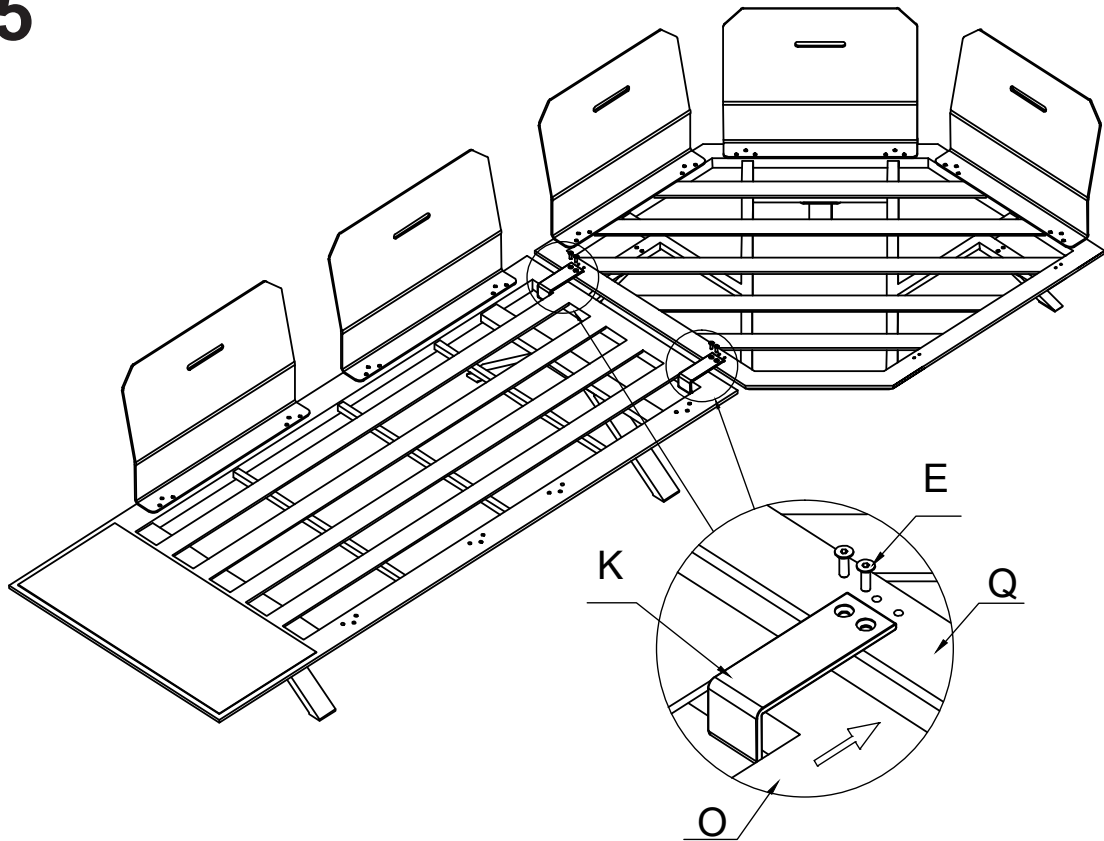

06

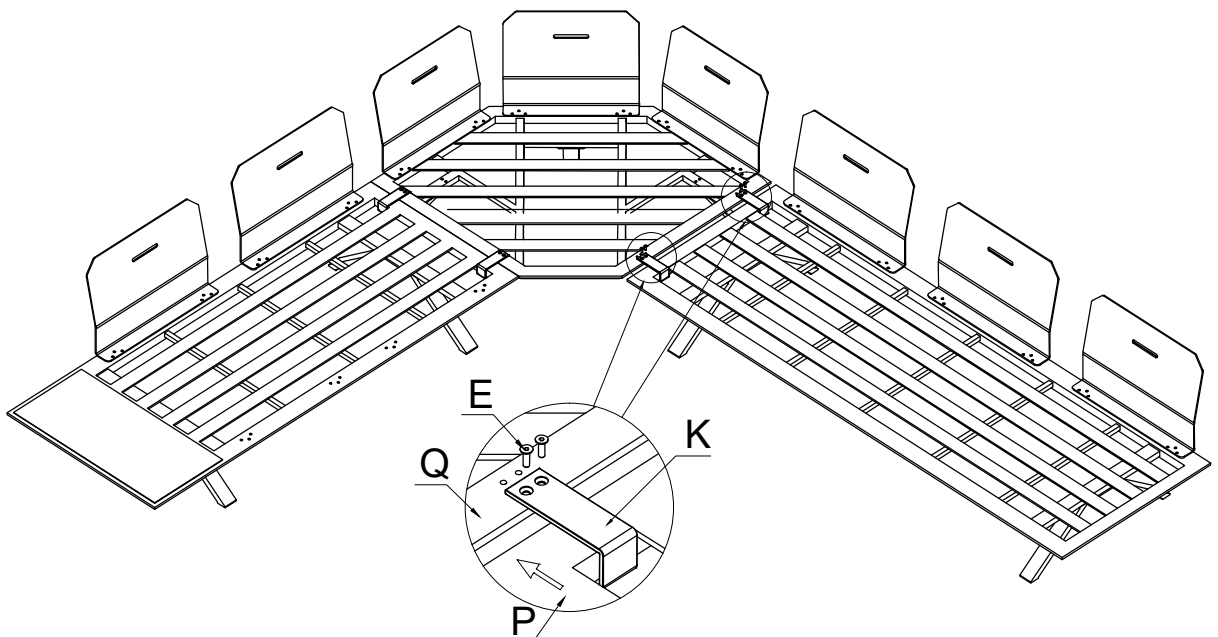

07

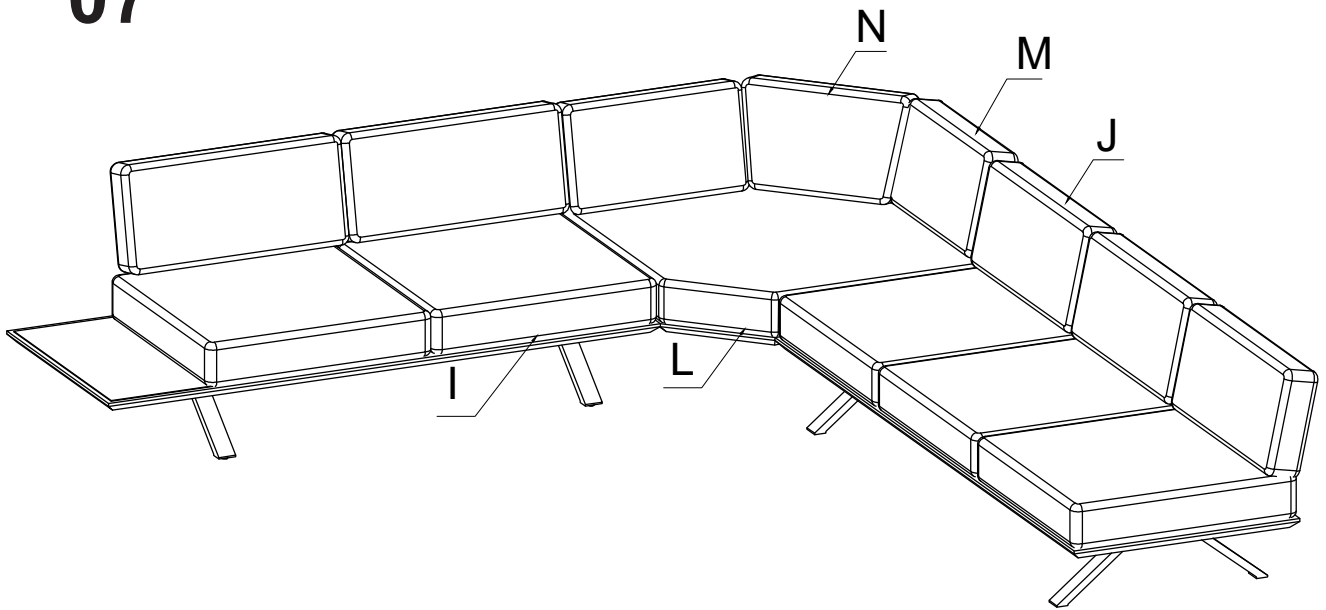

08

