

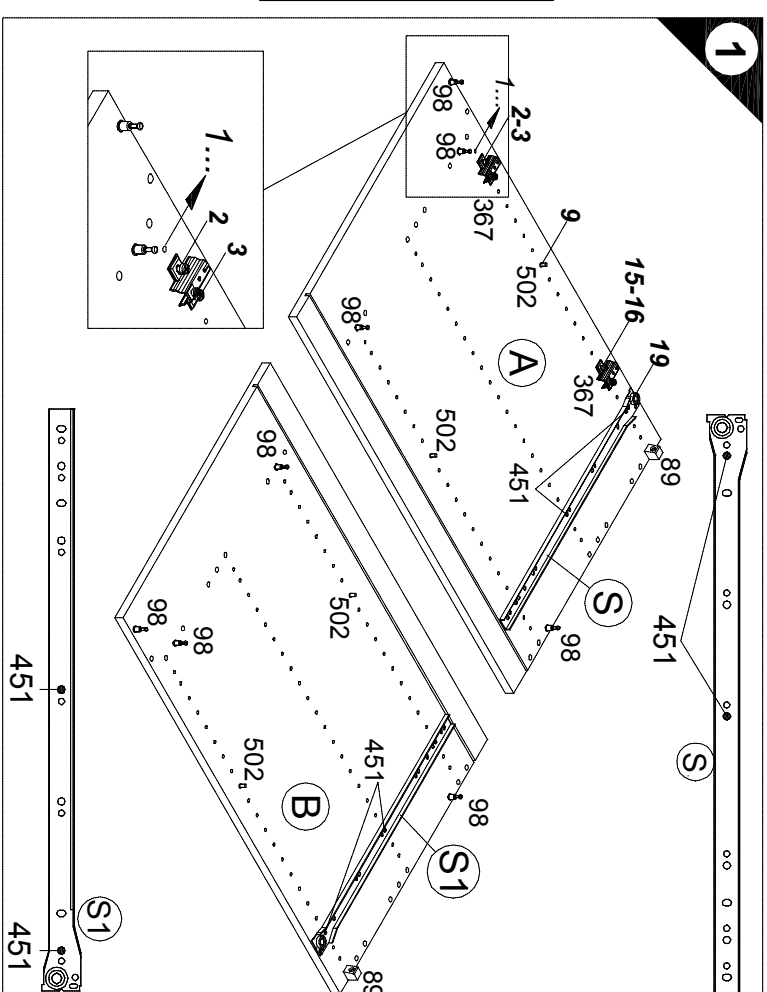
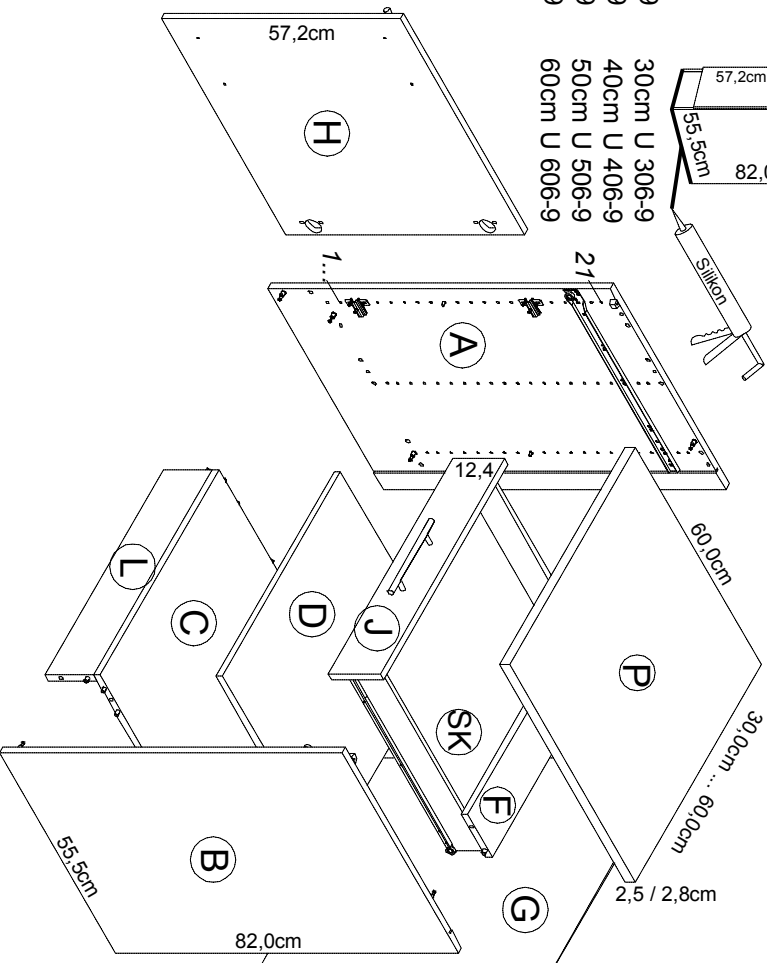
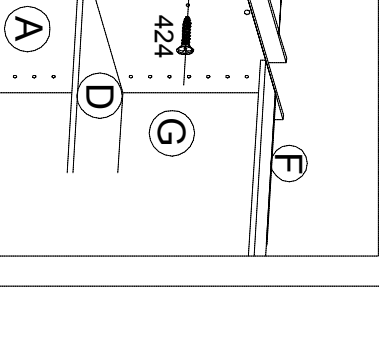
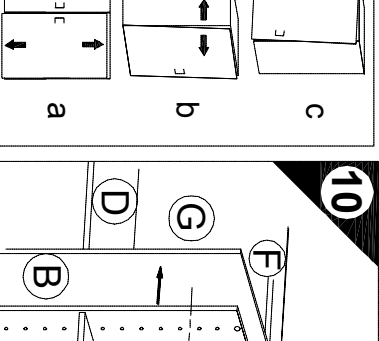
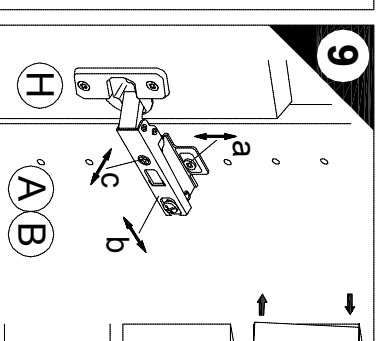
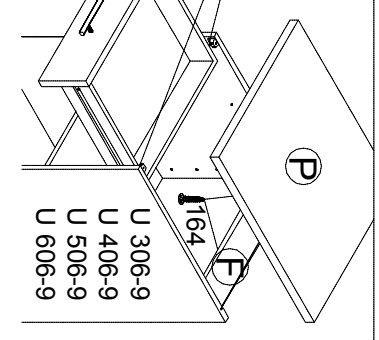
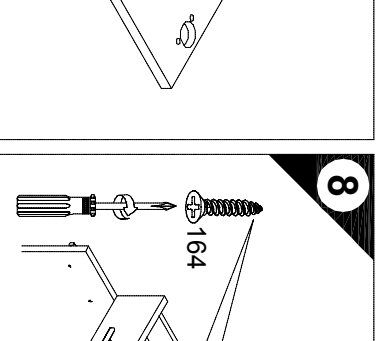
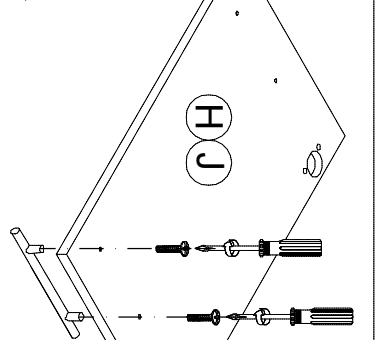
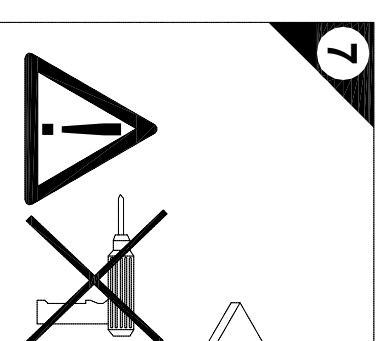
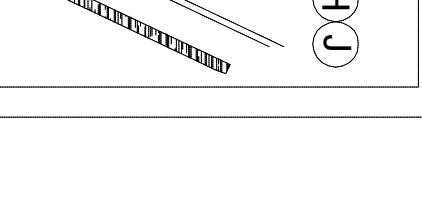
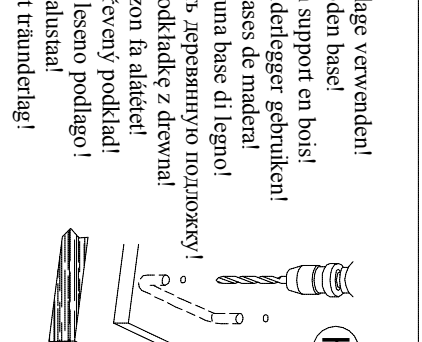
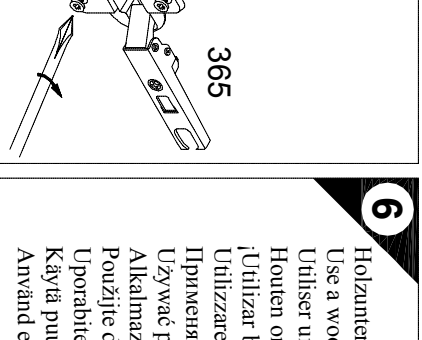
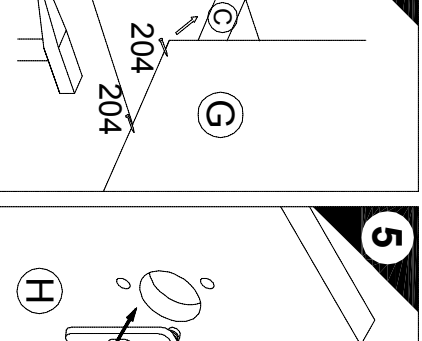
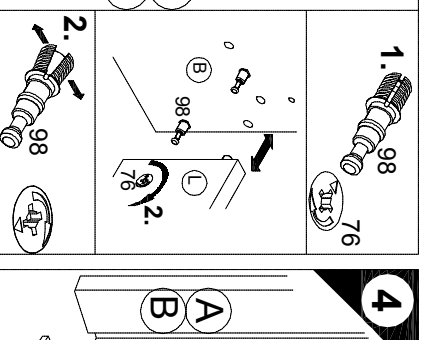
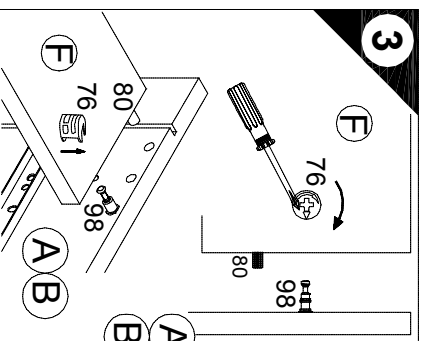


Service-Hotline
 01805-678101
 0,14€ pro Minute
+49 für Österreich
 Auslandsstarif pro Minute
service@optifit.de
 voor Nederland en België
 00800-40119350
benelux@optifit.de

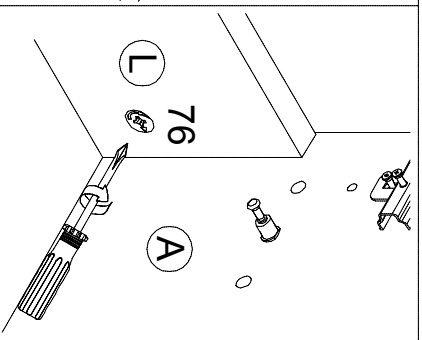



Montageanleitung

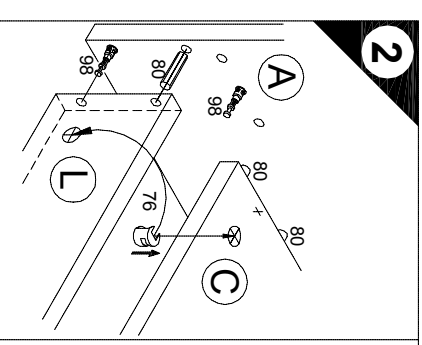




6 Holzunterlage verwenden!
 Use a wooden base!
 Utiliser un support en bois!
 Housten onderlegger gebruiken!
 Utilizar bases de madera!
 Utilizzare una base di legno!
 Применять деревянную подложку!
 Уżyć wać podkładkę z drewna!
 Alkalimazzon fa alátétel!
 Použijte dřevěný podklad!
 Uprorabite leseno podlaglo!
 Käytä puutalista!
 Använd ett träunderlag!

| Ersatzteile/ Spare parts/pièces de rechange/ Reserveonderdelen/Ricambi/Ricambi/Замачные части/Części zamiennne/pótkalkatészék/Náhradní části/Nadomestni deli/Varaosat/reservdelar | A | B | C | D | E | F | G | H | J |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 30cm U306-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954216 | Ⓓ E950306 | Ⓔ E970976 | Ⓕ E970006 | Ⓖ E970006 | Ⓗ E940614 | Ⓜ E940565 |
| 30cm U0306-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954216 | Ⓓ E950306 | Ⓔ E970976 | Ⓕ E970006 | Ⓖ E970976 | Ⓗ E940614 | Ⓜ E940565 |
| 40cm U406-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954215 | Ⓓ E950305 | Ⓔ E970975 | Ⓕ E970010 | Ⓖ E970975 | Ⓗ E940613 | Ⓜ E940564 |
| 40cm U0406-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954215 | Ⓓ E950305 | Ⓔ E970975 | Ⓕ E970010 | Ⓖ E970975 | Ⓗ E940613 | Ⓜ E940564 |
| 50cm U506-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954224 | Ⓓ E950304 | Ⓔ E970974 | Ⓕ E970117 | Ⓖ E970974 | Ⓗ E940612 | Ⓜ E940563 |
| 50cm U0506-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954224 | Ⓓ E950304 | Ⓔ E970974 | Ⓕ E970117 | Ⓖ E970974 | Ⓗ E940612 | Ⓜ E940563 |
| 60cm U606-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954223 | Ⓓ E950303 | Ⓔ E970973 | Ⓕ E970116 | Ⓖ E970973 | Ⓗ E940611 | Ⓜ E940562 |
| 60cm U0606-9 | Ⓐ E961021 | Ⓑ E961022 | Ⓒ E954223 | Ⓓ E950303 | Ⓔ E970973 | Ⓕ E970116 | Ⓖ E970973 | Ⓗ E940611 | Ⓜ E940562 |



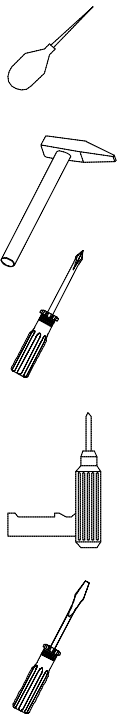



1 → 2 → 3 ...

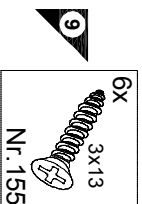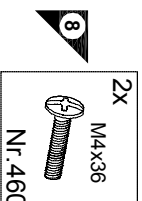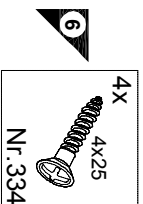

Montageanleitung

Service-Hotline
01805-678101
0,14€ pro Minute
++49 für Österreich
Auslandstarif pro Minute
service@optifit.de
voor Nederland en België
00800-40119350
benelux@optifit.de

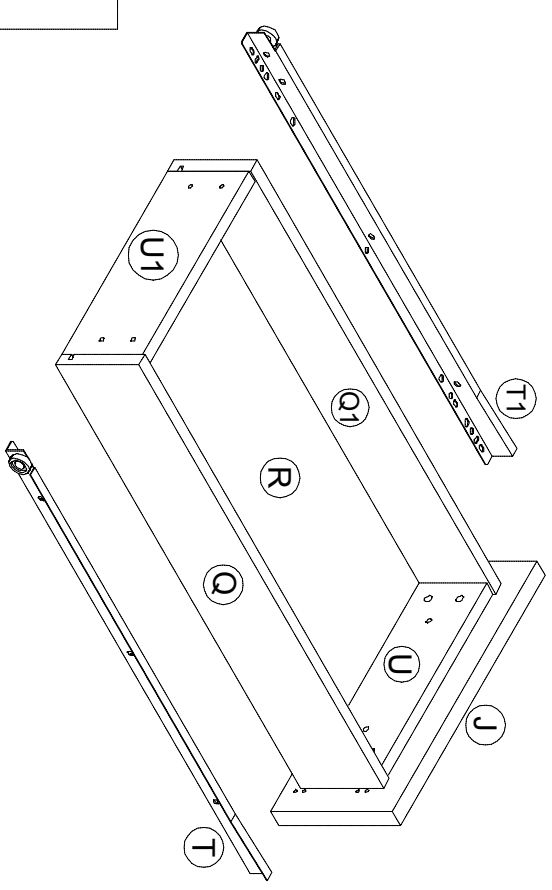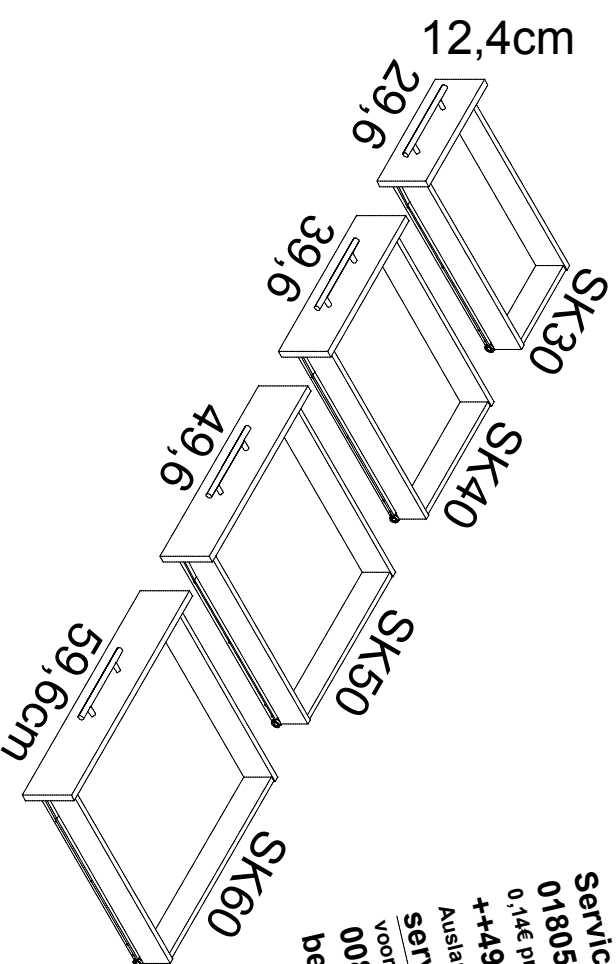

1

Holzunterlage verwenden!
Use a wooden base!
Utiliser un support en bois!
Houten onderlegger gebruiken!
!Utilizar bases de madera!
!Utilizar bases de madeira!
Use a wooden base di legno!
Применять деревянную подложку!
Узурчэ родкітай з дрэва!
Alkalmazzon fa alátét!
Podijte drevený podklad!
Upravithe lesenjo podlago!
Käviä puuhallusta!
Använd ett träunderlag!

2

3

4

5

10 min.

6

7

7

8

9

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/róalkatészék/Náhradní části/Nadomestni deli/Varaosat/reservedelar

| | | | | | | | | |
|-------|-----------|------------|-----------|-----------|------------|-----------|------------|-----------|
| SK 30 | ⊙ E945400 | ⊙1 E945400 | ⊙ E970153 | ⊙ E946151 | ⊙1 E946150 | ⊙ E945405 | ⊙1 E945405 | ⊙ E500663 |
| SK 40 | ⊙ E945400 | ⊙1 E945400 | ⊙ E970152 | ⊙ E946151 | ⊙1 E946150 | ⊙ E945406 | ⊙1 E945406 | ⊙ E500663 |
| SK 50 | ⊙ E945400 | ⊙1 E945400 | ⊙ E970151 | ⊙ E946151 | ⊙1 E946150 | ⊙ E945407 | ⊙1 E945407 | ⊙ E500663 |
| SK 60 | ⊙ E945400 | ⊙1 E945400 | ⊙ E970150 | ⊙ E946151 | ⊙1 E946150 | ⊙ E945408 | ⊙1 E945408 | ⊙ E500663 |