


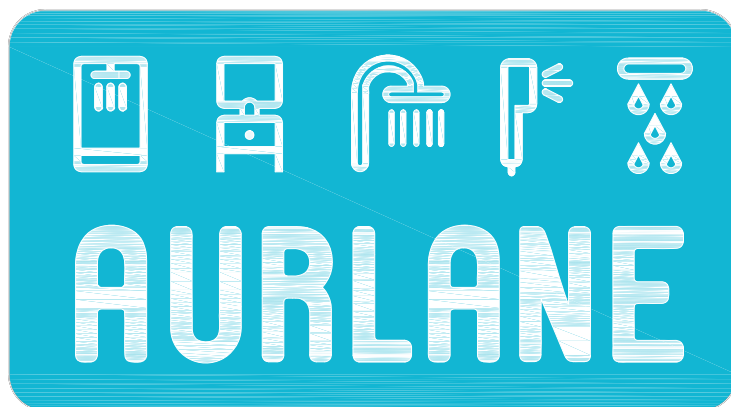



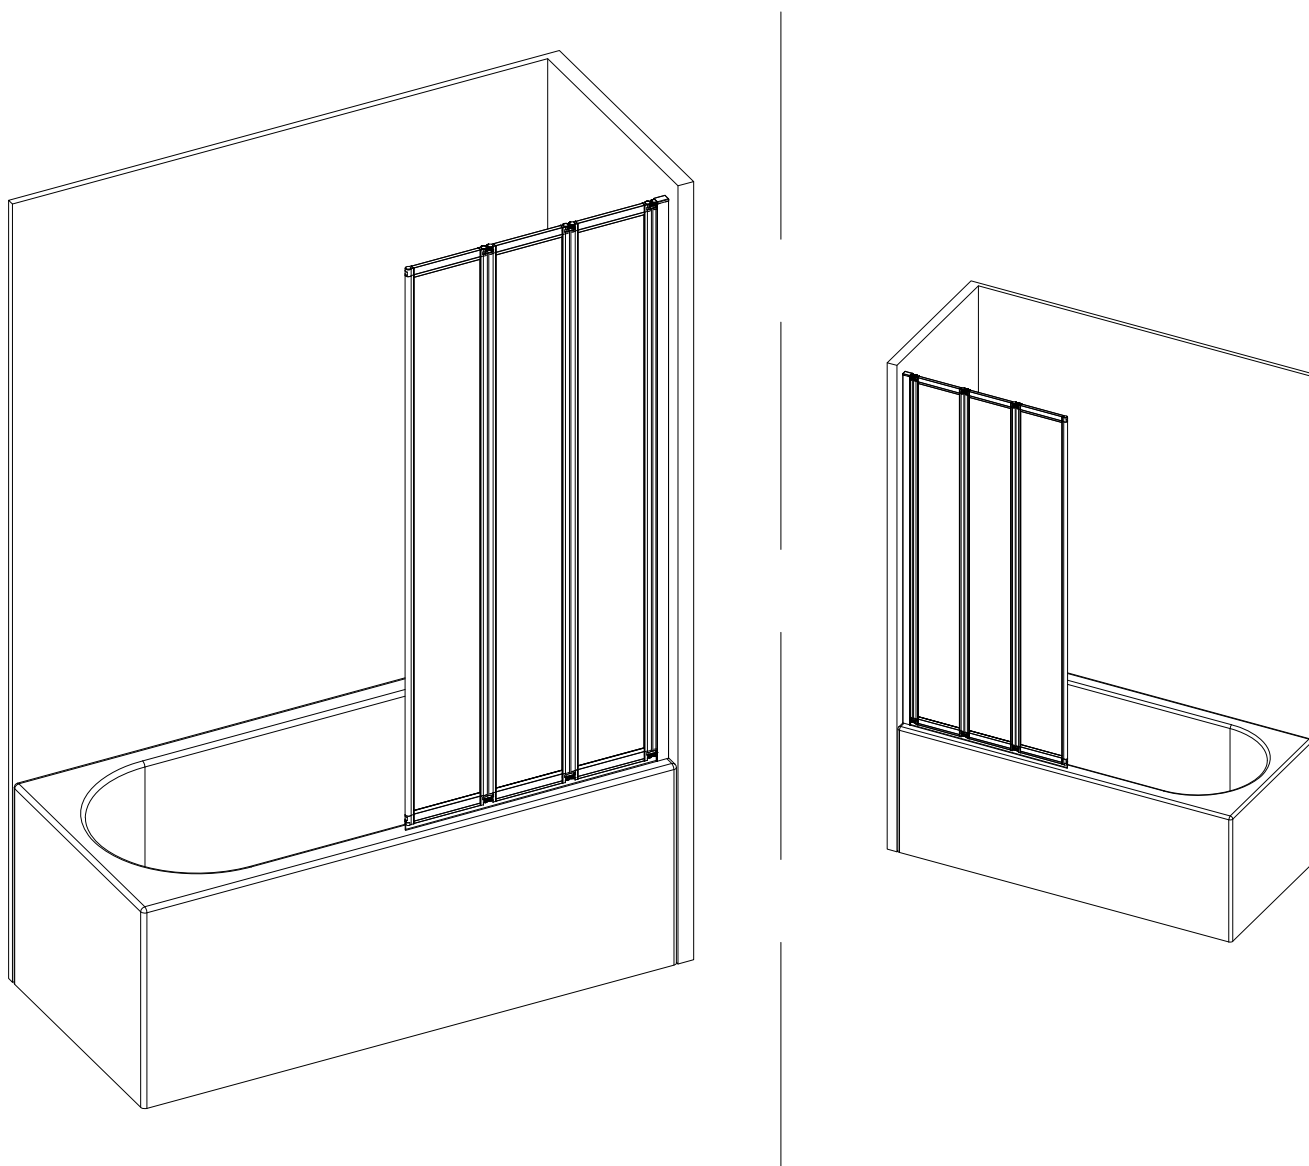



REF FAC277
TRIPLE WHITE
H1430xW1250mm

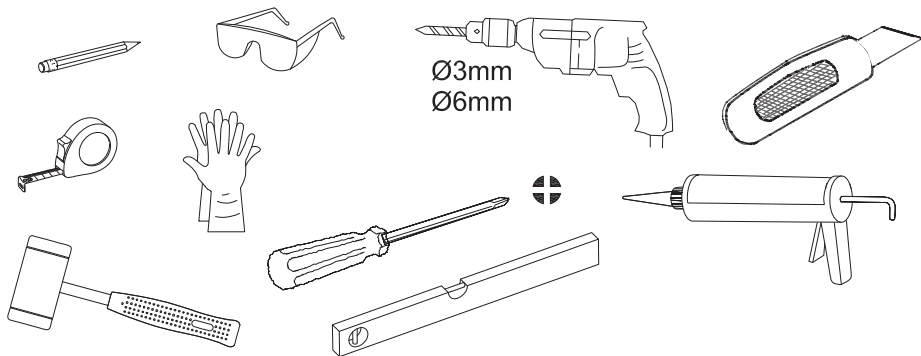


www.aurlane.com





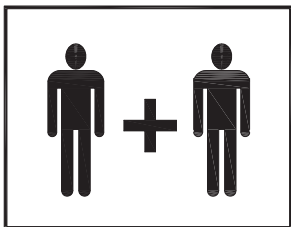









1 AURL 1319  X1	2 AURL 989  X3	3 AURL 990  ST3.9X35 X3	4  X1	5 AURL 991  ST3.5X10 X3	6 AURL1000  X3	7 AURL1001  X1	8 AURL 1321  X1
9 AURL 1316  X1	10 AURL1284 pre-installed  X3	11 AURL 2098 pre-installed  X6	 — 7				

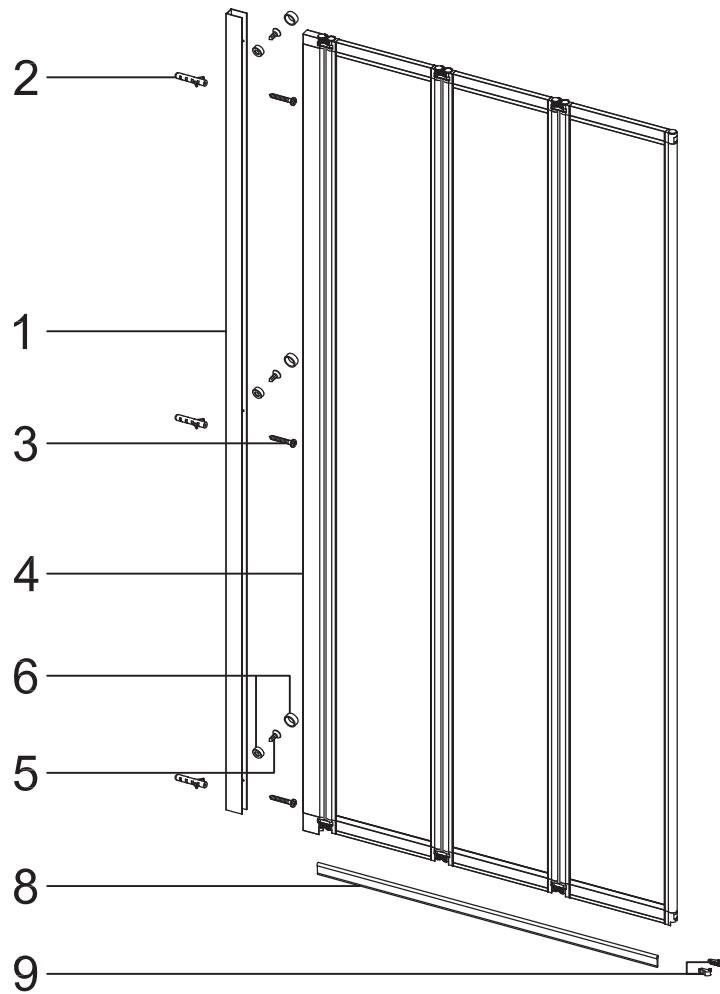






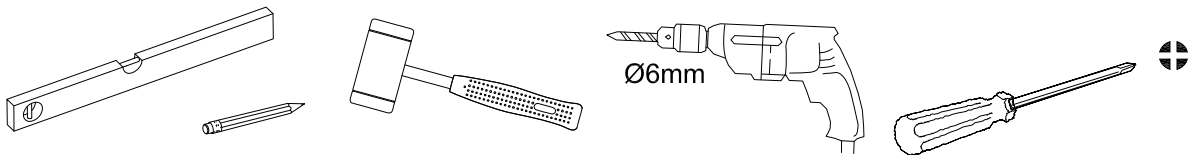












- | | | |
|---|---|---|
| 1 | 2 | 3 |
|  |  |  |
| X1 | X3 | X3 |

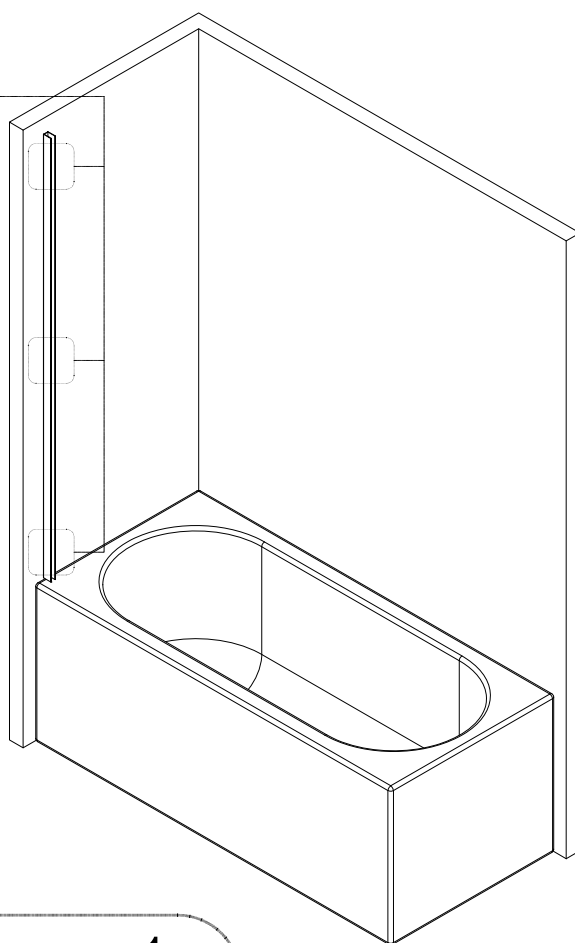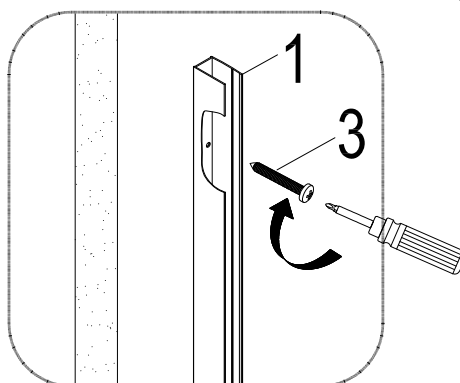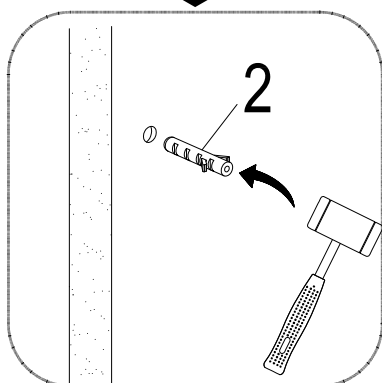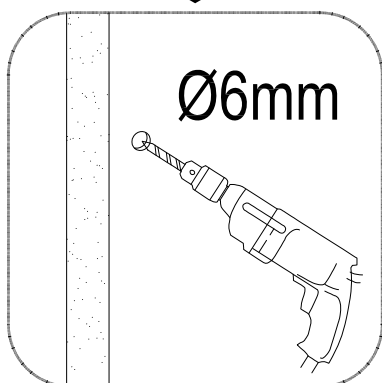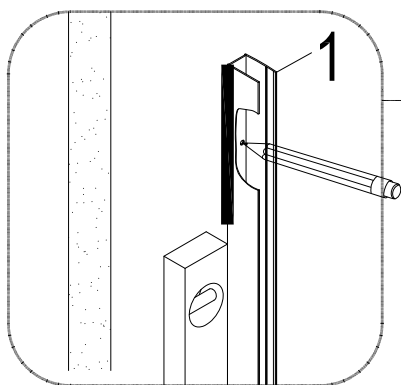


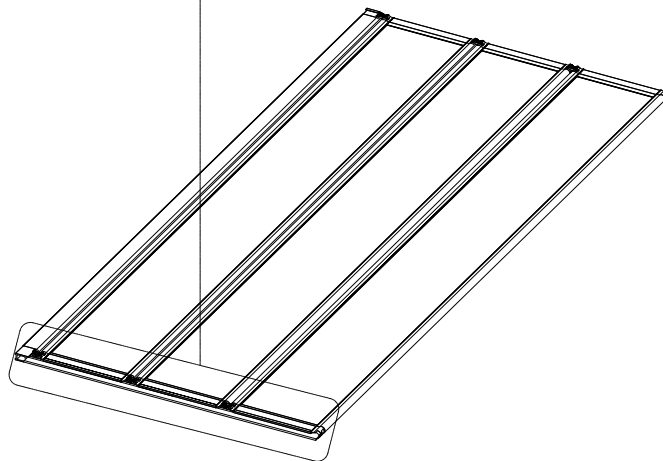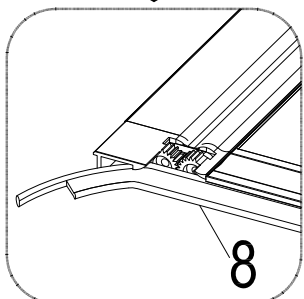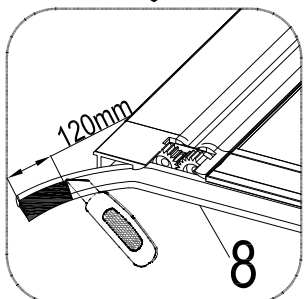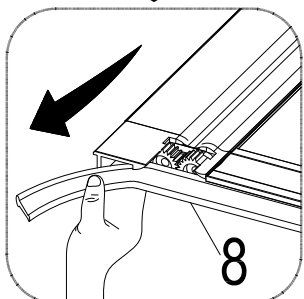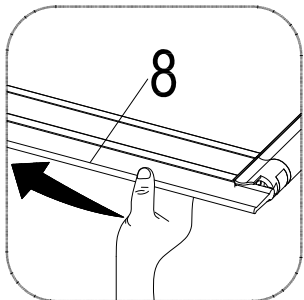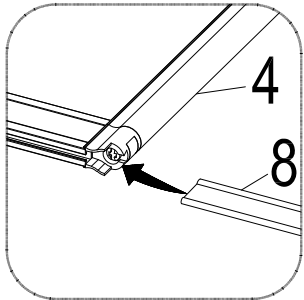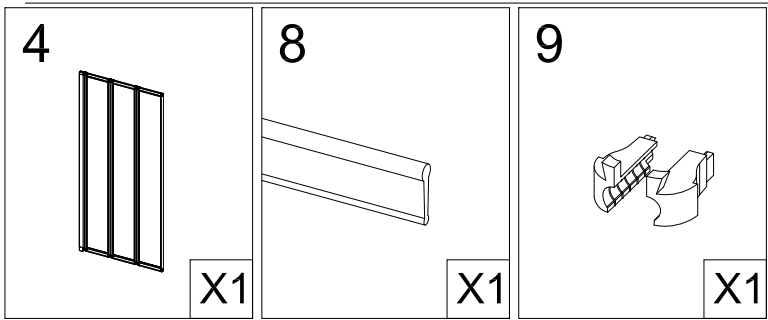


Für eine einfache Installation
befeuchten Sie die Fuge mit
Seifenlauge.

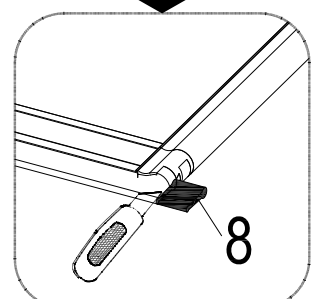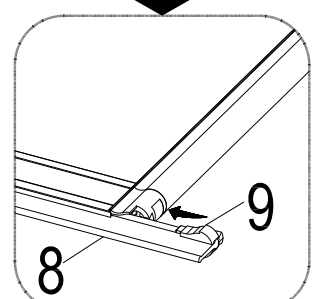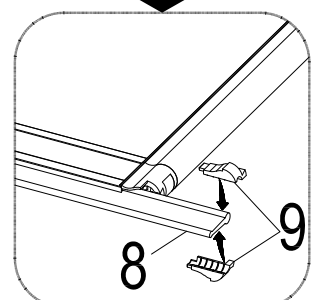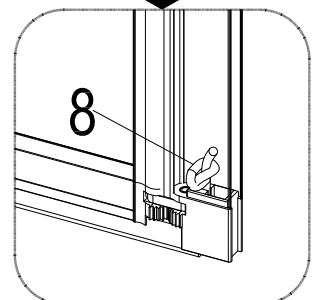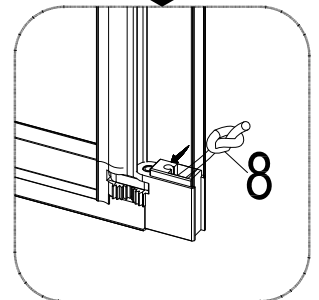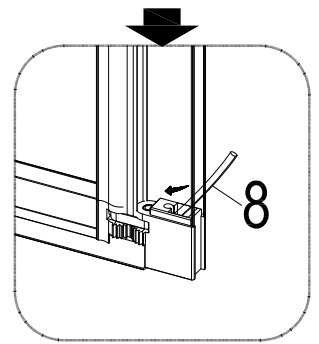

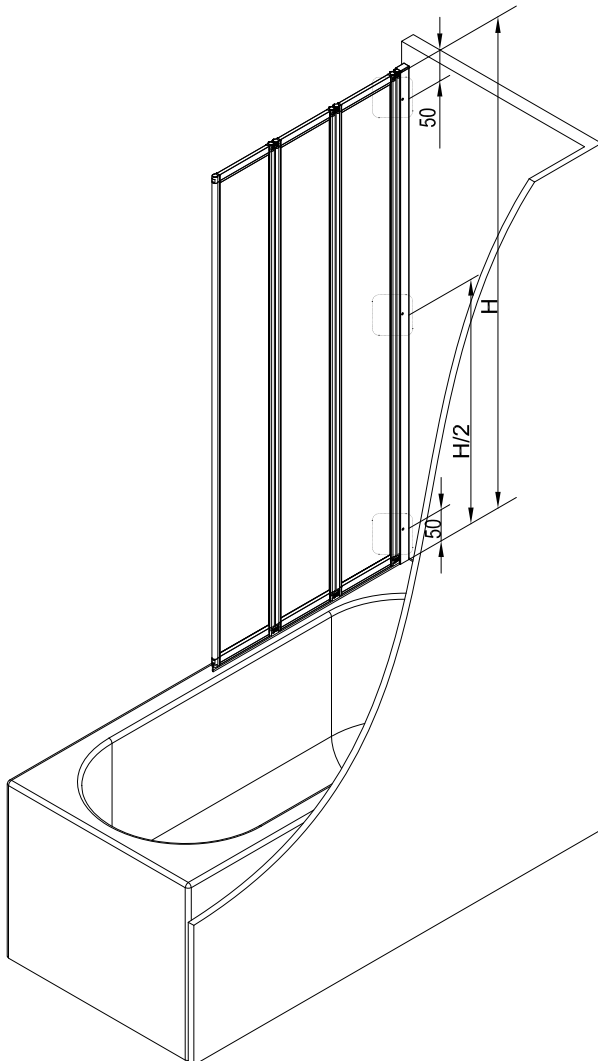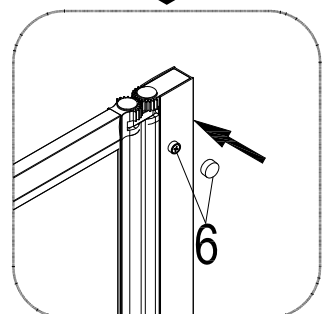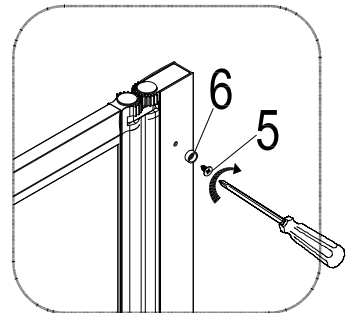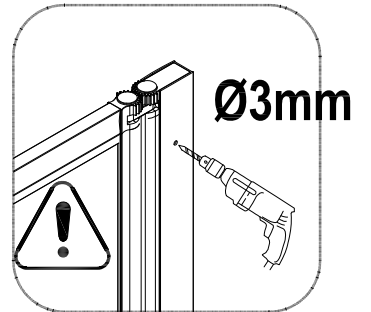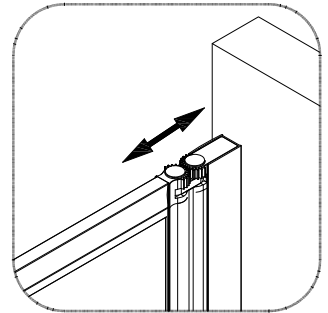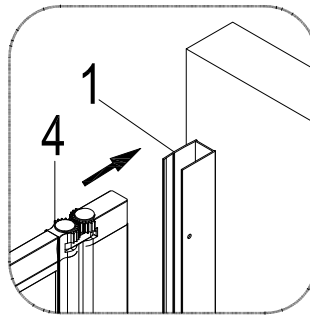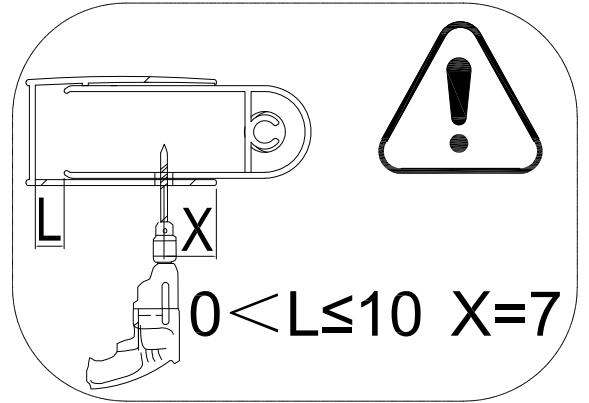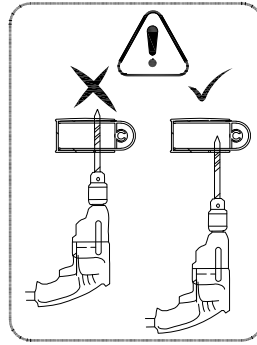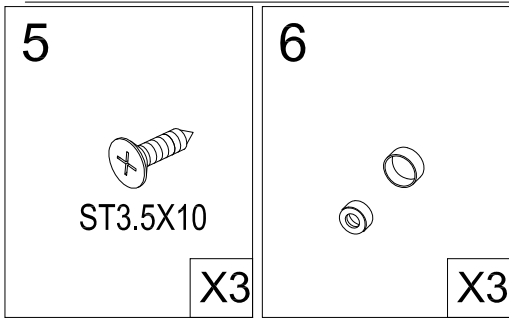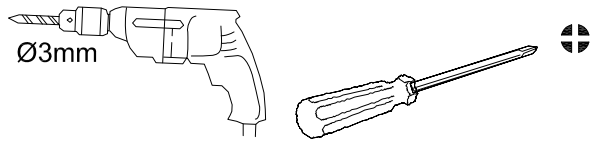

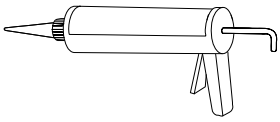

7



X1

