

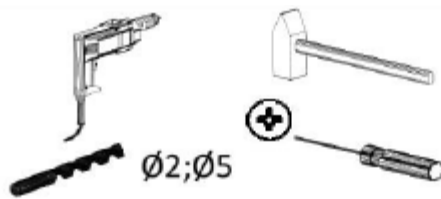
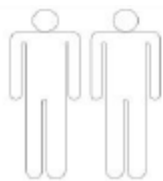

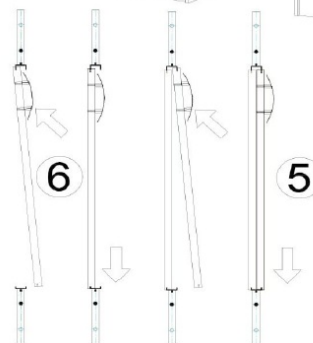
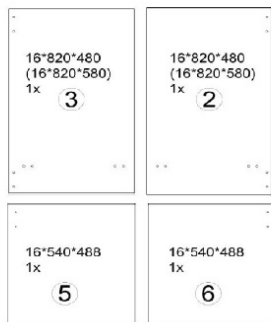



KS50S1 – KS60S1 Ormaric sa sudoperom 100 x 50 cm

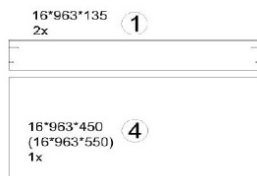

KO 01 8*30 8x 	KN 03 7*50 8x 	PL 12 8x 
AK 138 1x 	AK 137 1x 	DR 27 3,5*16 4x 
KL 01 4mm 1x 	UC 06 4*30 4x 	UC 49 (64 mm) 2x 
GN 1 4x  podložna pločica		

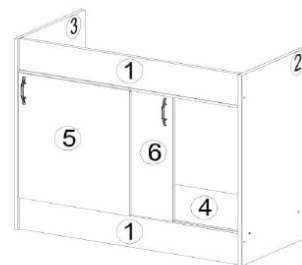


1.

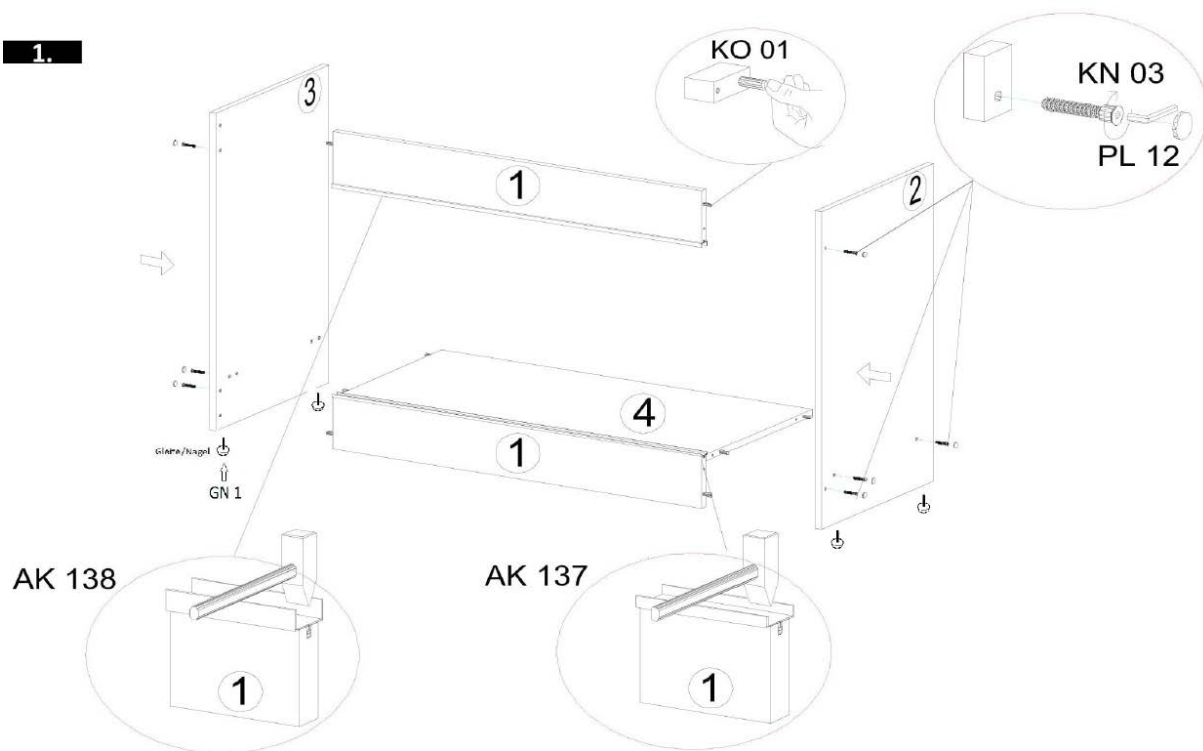

2.


Prvo probušite rupice na obje bočne stranice ormarića.

Vijke DR27 zavijte do 5 mm.

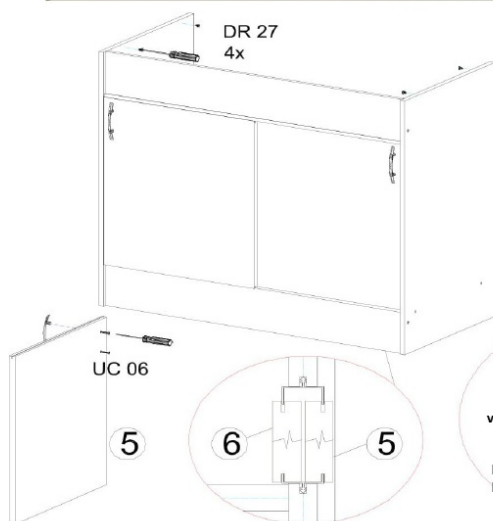

3.

Postavite sudoper
Umetnite stezaljke na rub sudopera,
poravnavajući ih s vijcima DR27. Nakon
umetanja, pomaknite stezaljku za montažu
ulijevo; pomicanjem u lijevo pričvrstite čete
sudoper.

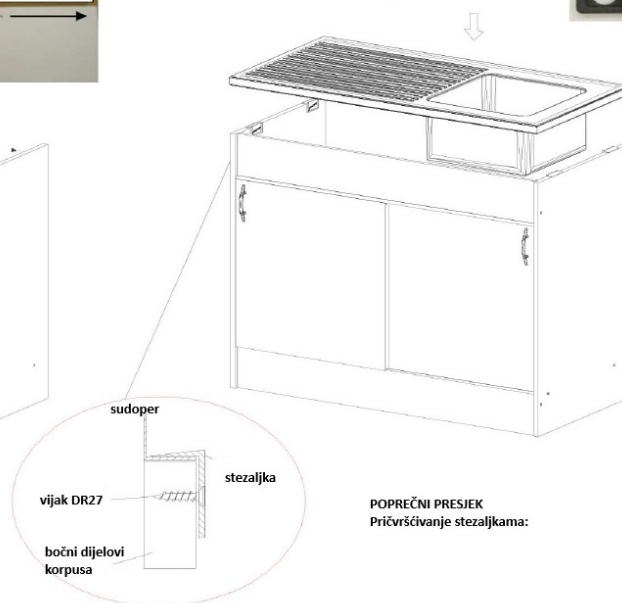

POPREČNI PRESJEK
Pričvršćivanje stezaljkama: