

















## MONTAGEANLEITUNG

-  MONTAGEANLEITUNG
-  ASSEMBLY INSTRUCTION
-  DE INSTRUCTIE VAN DE ASSEMBLAGE
-  ISTRUZIONE DELL'ASSEMBLEA
-  INSTRUCCIÓN DE ASAMBLEA
-  INSTRUCTION DE MONTAGE
-  NÁVOD K MONTÁŽI
-  MONTERINGSANVISNING

-  MONTAJ TALIMATI
-  ASENNUSOHJE
-  BRUGSANVISNING
-  BRUKSANVISNING
-  UPUTE ZA MONTAŽU
-  NAVODILA ZA MONTAŽO
-  SZERELÉSI ÚTMUTATÓ
-  INSTRUCTIUNI DE MONTAJ



Modell-Nr.

# 70090

ART.-NR. FRONT KORPUS

70091  Silber

70092  Silber

70094  Silber

70097  Silber

70096  

Friedrich Küpper GmbH  
Friedrich-Küpper-Weg  
54570 Berlingen  
Deutschland

Telefon +49 (0) 65 91 - 95 42 0  
Telefax +49 (0) 65 91 - 95 42 17  
E-Mail [info@friedrich-kuepper-gmbh.de](mailto:info@friedrich-kuepper-gmbh.de)  
Internet [www.friedrich-kuepper-gmbh.de](http://www.friedrich-kuepper-gmbh.de)

## EINZELTEILE / PIECES

A

2x

1200 mm x 200 mm



E

2x

600 mm x 200 mm



G

1x

600 mm x 180 mm



H

1x


600 mm x 180 mm



J

3x

595 mm x 400 mm

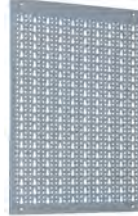

M

2x

560 mm x 375 mm



N

1x

560 mm x 400 mm



P

4x





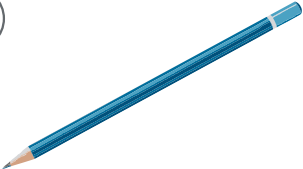

393 mm x 138 mm



BEUTELINHALT / BAG CONTENT

 <b>22x</b> M5x10 mm	 <b>22x</b> ø 5,3 mm	 <b>22x</b> M5	 <b>6x</b> ø 6,4 mm	 <b>6x</b> 6x12 mm	 <b>6x</b>
 <b>3x</b>	 <b>3x</b>	 <b>4x</b> 4,5x60 mm	 <b>4x</b> E6x30 mm	 <b>4x</b> 15x15 mm	

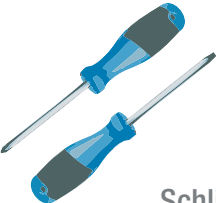BENÖTIGTES WERKZEUG / NEEDED TOOLS


<p>①</p>  PH2x100 Schlitz 6,5x150	<p>②</p>  SW 8	<p>③</p>  6 mm
<p>④</p> 	<p>⑦</p> 	<p>⑧</p> 

1.



2.  2x M5  2x M5 x 10  2x 5,3 mm

 2 SW8  1 PH 2x100

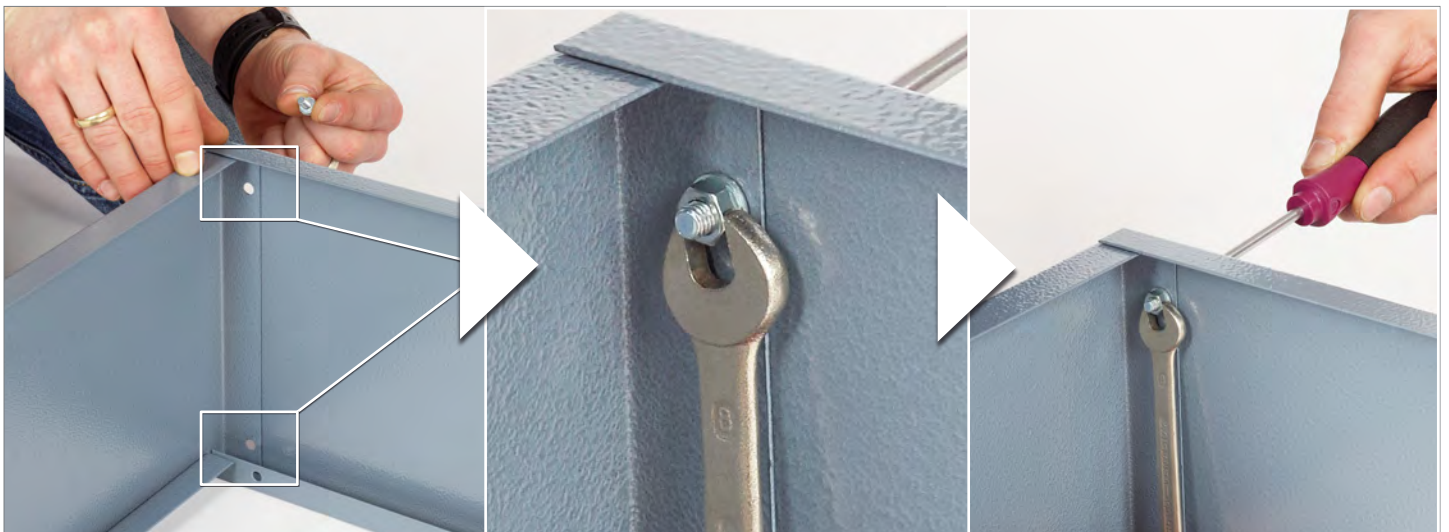



3.



4.

1x M5 1x M5 x 10 1x 5,3 mm

② SW8 ① PH2x100



5.

1x M5 1x M5 x 10 1x 5,3 mm


② SW8 ① PH2x100





6.

2x M5 2x M5 x 10 2x 5,3 mm

② SW8 ① PH2x100

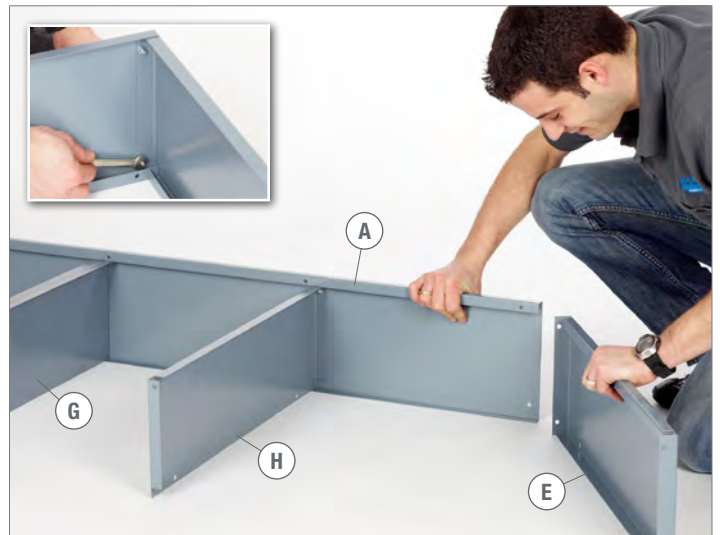

7.

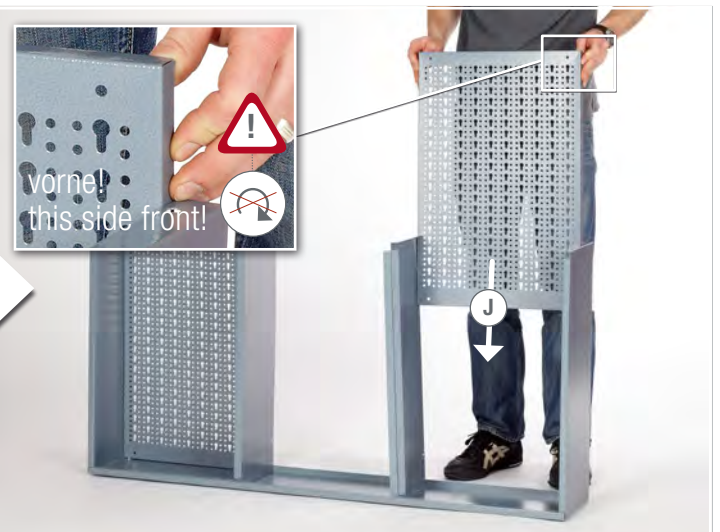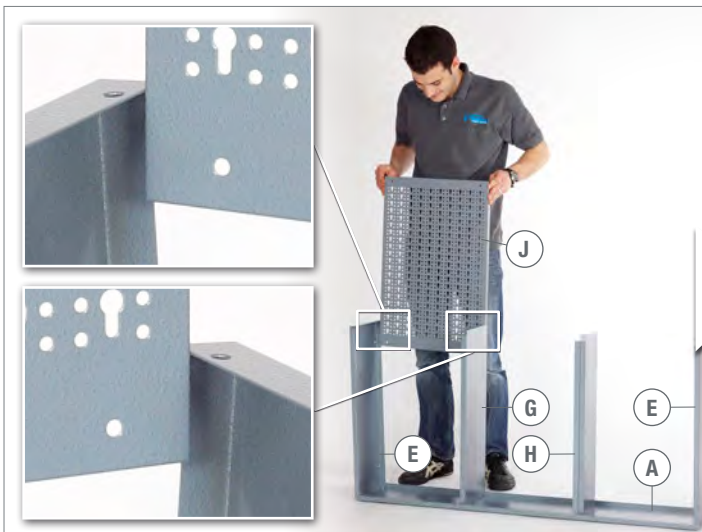




8.

4x M5 4x M5 x 10 4x 5,3 mm

2 SW8 1 PH 2x100




9.

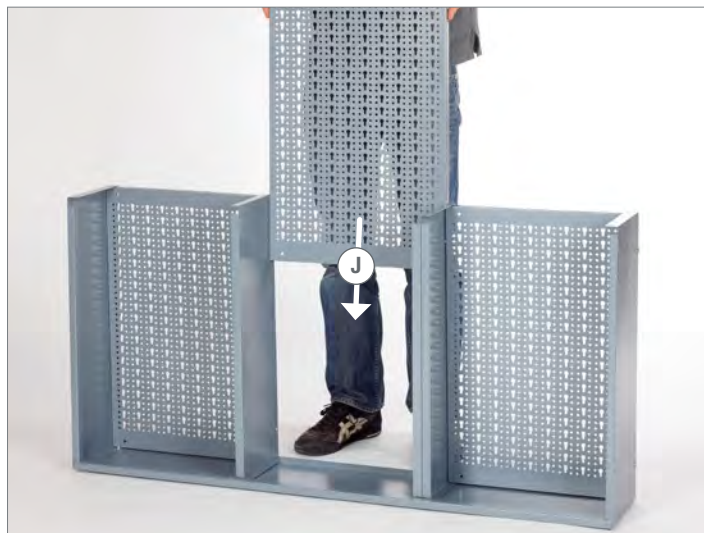

10.

2x M5 2x M5 x 10 2x 5,3 mm


2 SW8 1 PH 2x100

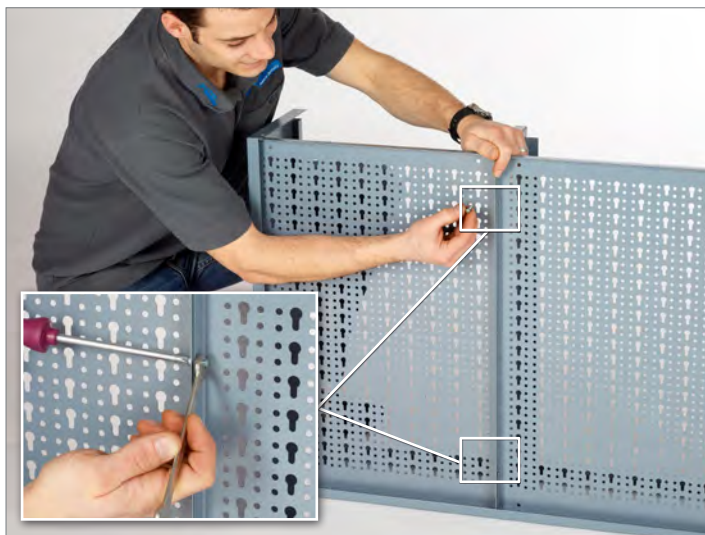


11.

2x M5 2x M5 x 10 2x 5,3 mm

2 SW8 1 PH 2x100

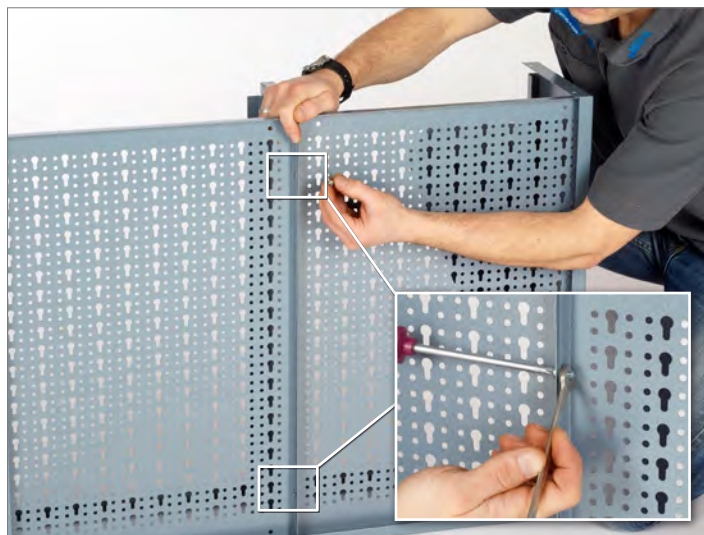


12.

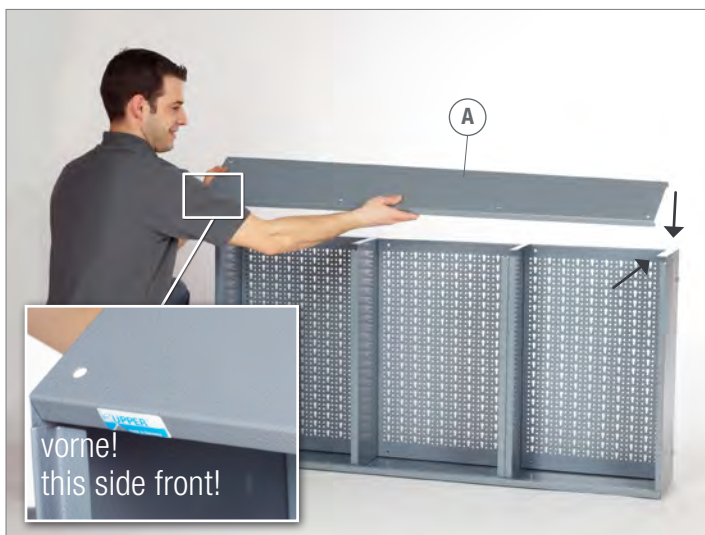

13.

6x M5 6x M5 x 10 6x 5,3 mm

2 SW8 1 PH 2x100

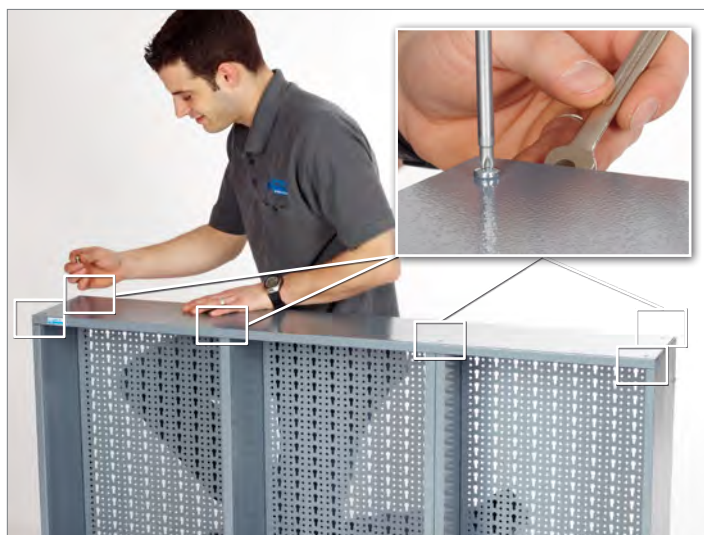



14. WICHTIG / IMPORTANT


vorne! / front!



15.




16.

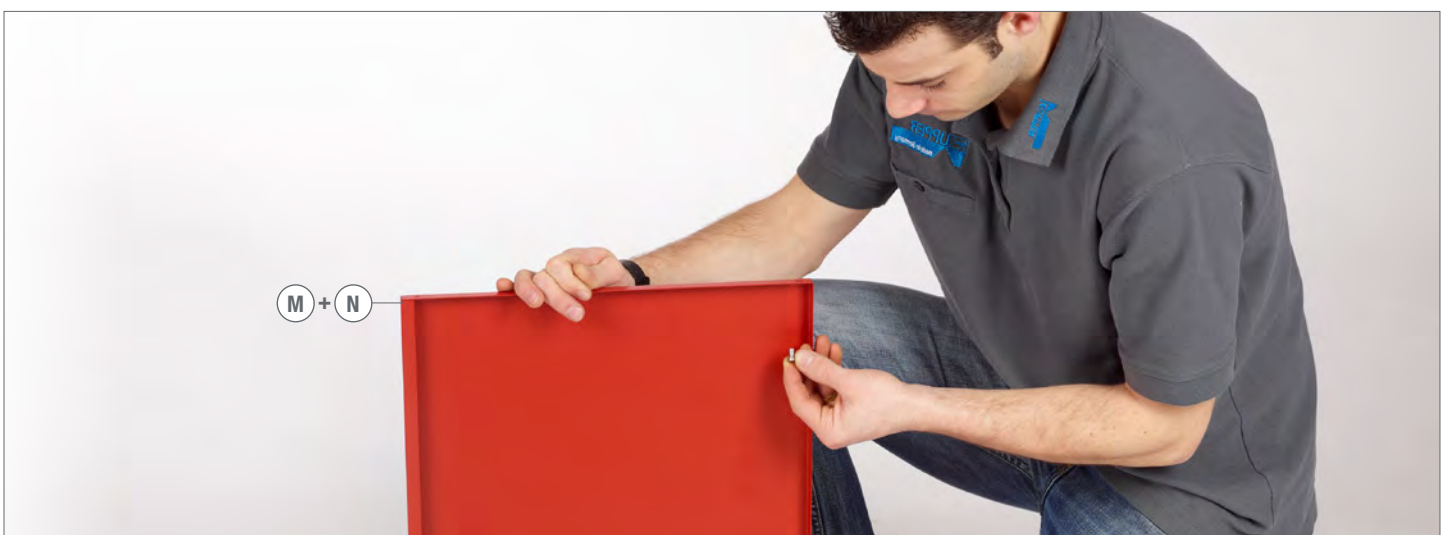


17. 3x 3x 6 x 12

① Schlitz 6,5 x 150

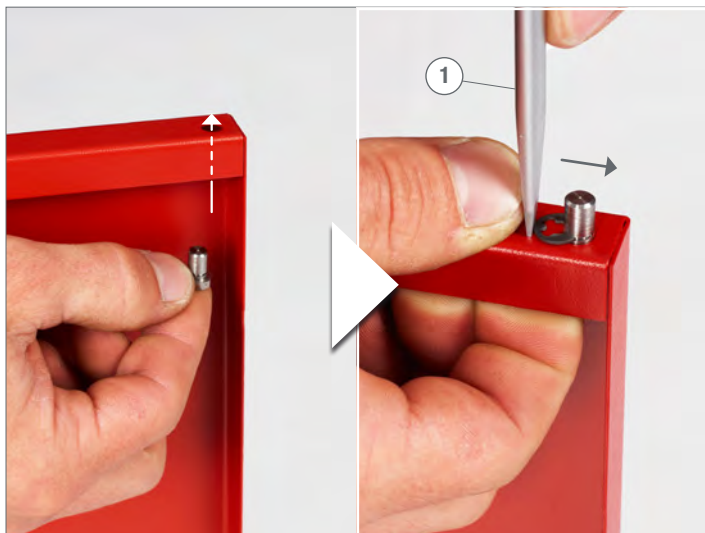


18. 3x 6,4 mm

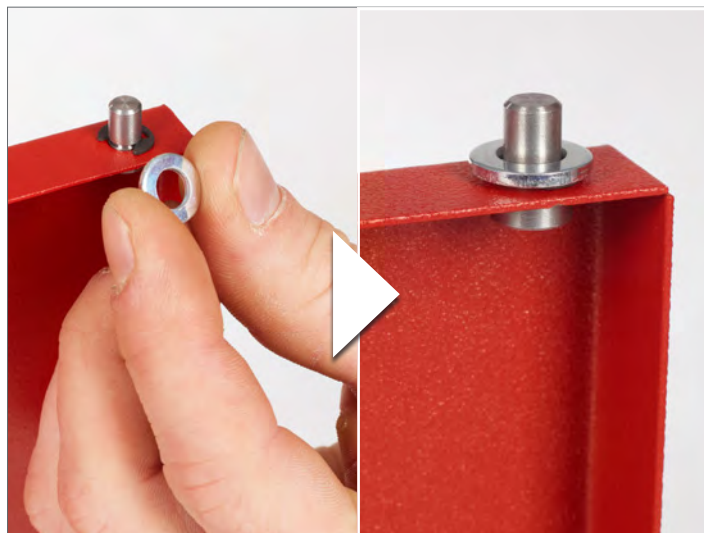


19. 3x 3x 6 x 12


① Schlitz 6,5 x 150

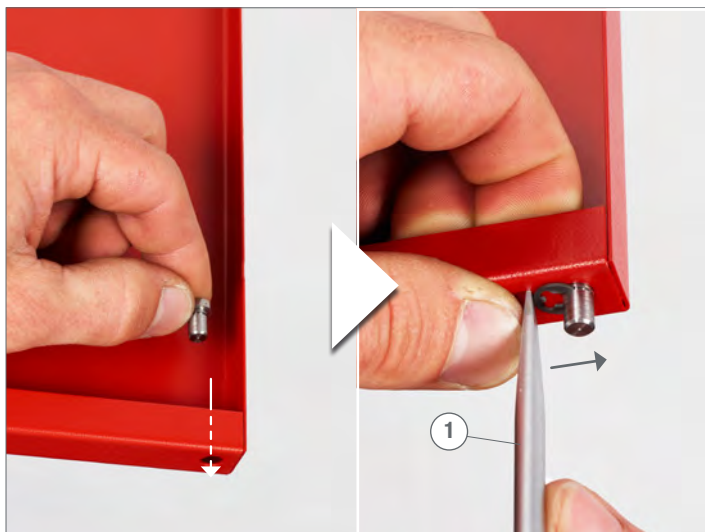

20. 3x 6,4 mm

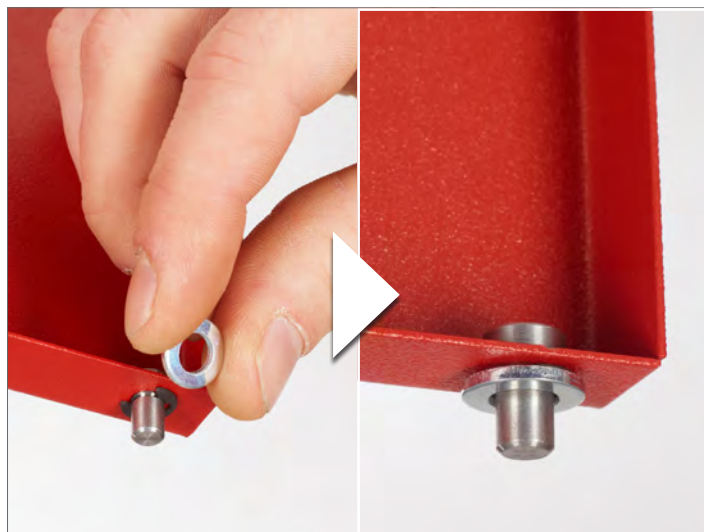

21.

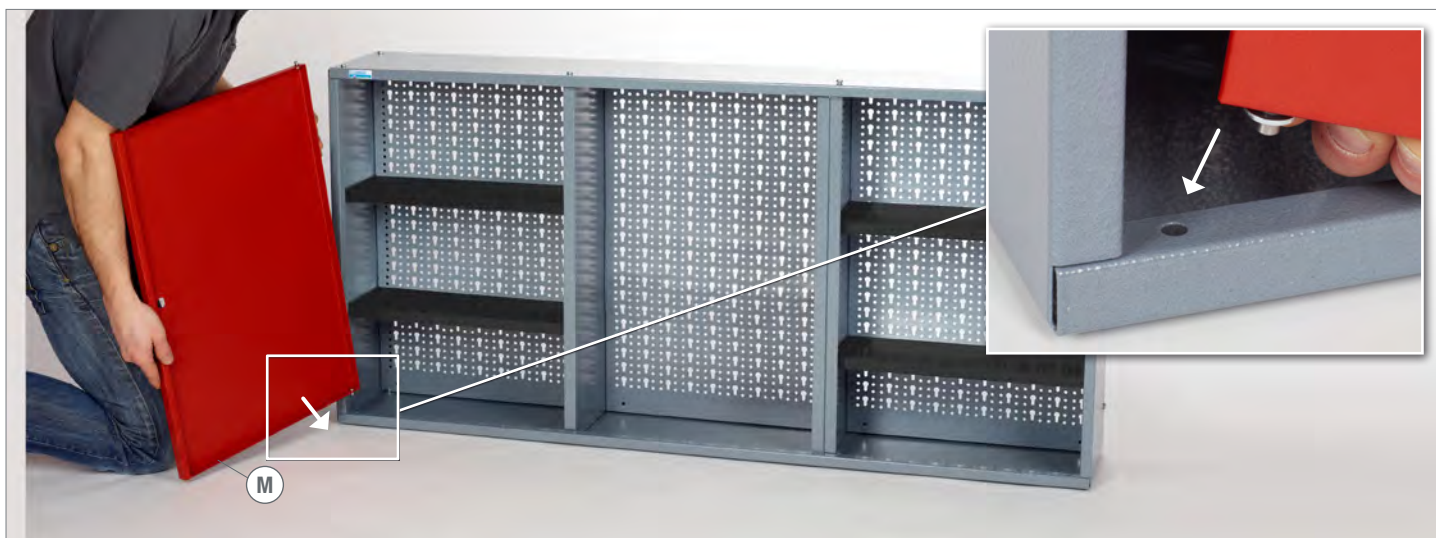




22.




23.

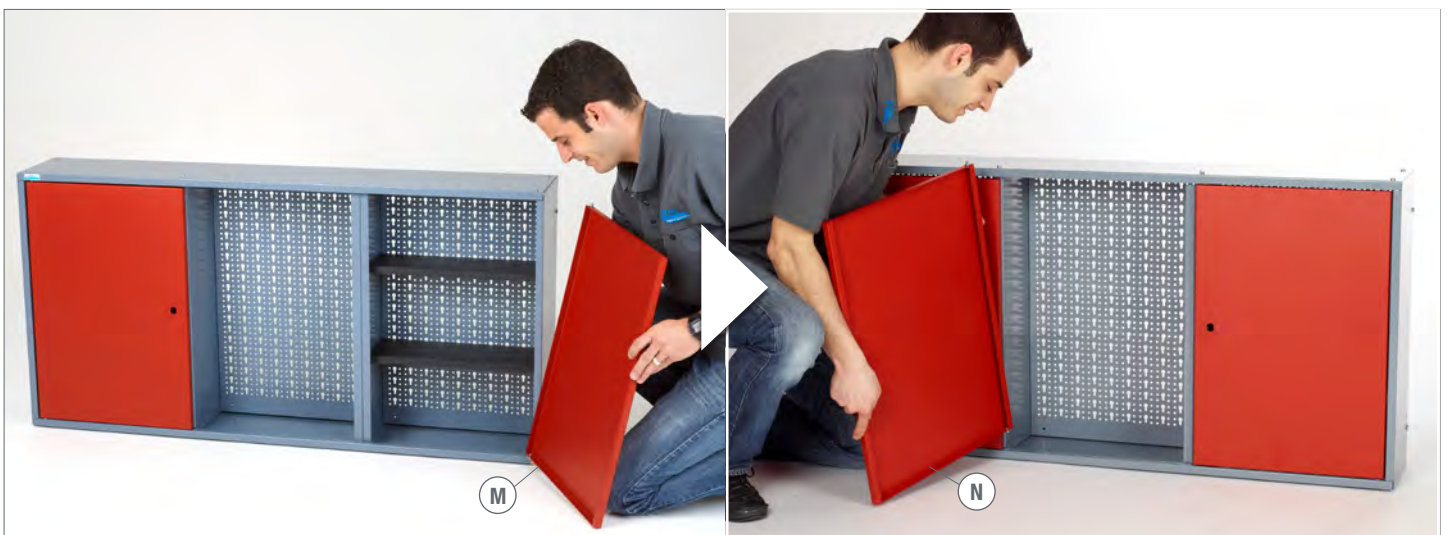

ZU SCHRITT 15. / IN ADDITION TO STEP 15.

②  SW8  
①  PH2x100

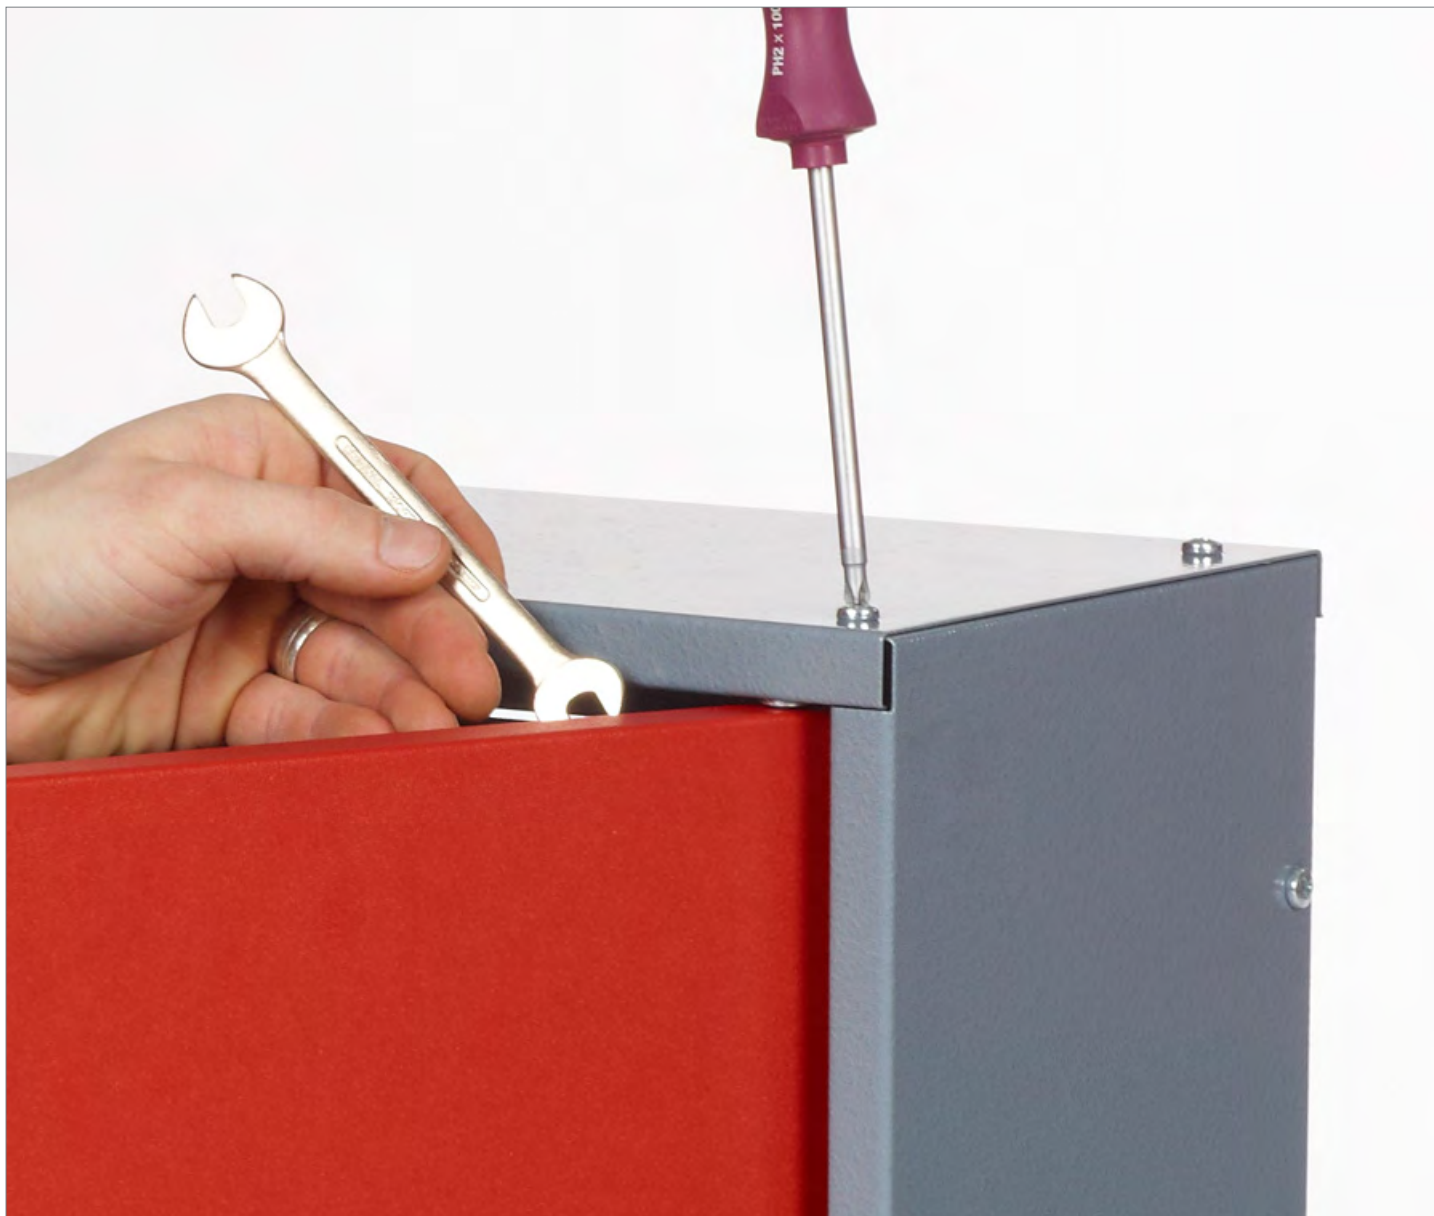

24.  3x  3x






25.




A.  

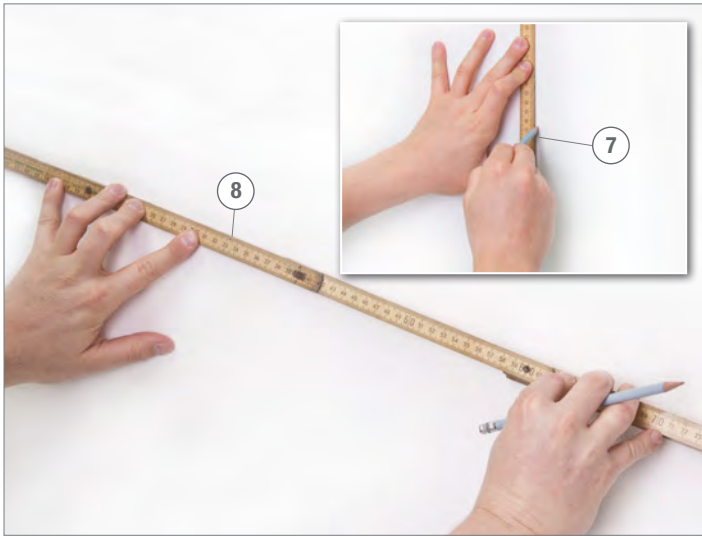

B.  4x 6 mm  6 mm 



C.  4x 4,5 x 60  4x 15 x 15

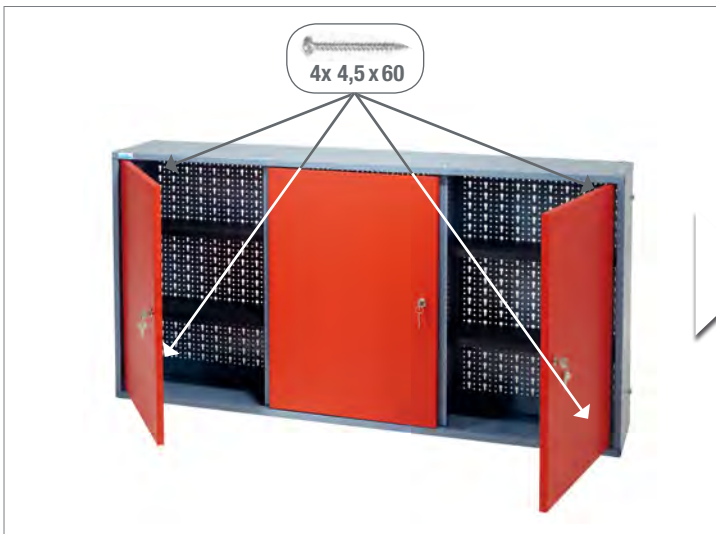

Modell-Nr.

**70090**