


Concept Epure MK-012

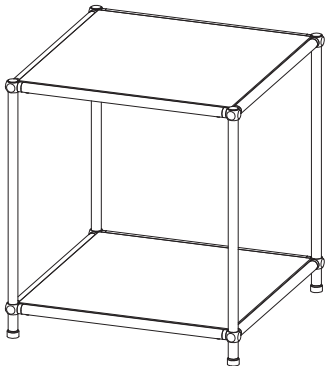

PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY
①		2	⑤		8	(D)		4	(H)		1
②		8	(A)		4	(E)	$\phi 3 \times 12$	16	(I)		1
③		4	(B)		4	(F)	(M3)	1			
④		4	(C)	M6*15	4	(G)	(M4)	1			

STEP:

1

These holes are all positioned on the same side


2

(E) 16

3


(F) 1

4

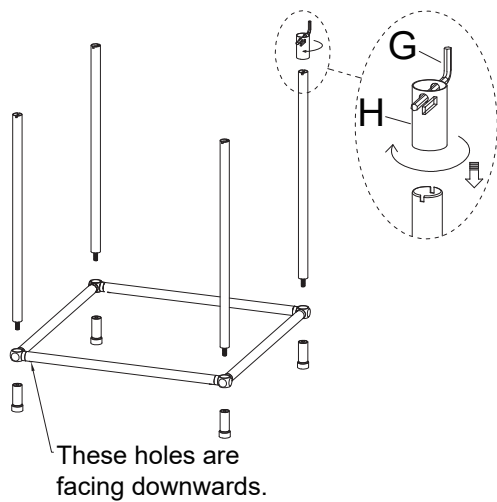


	(H)	1
	(G)	1

5

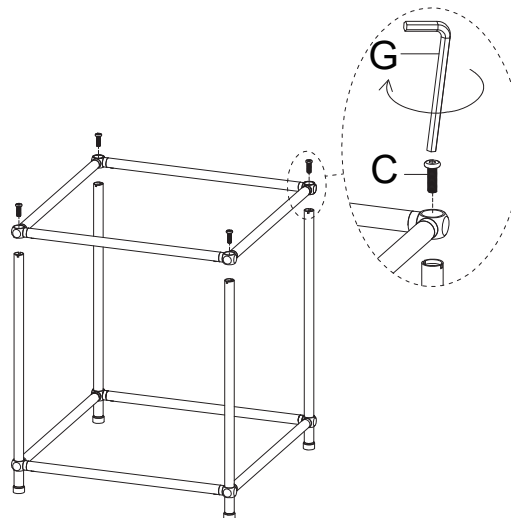

	(C)	4
	(G)	1


6

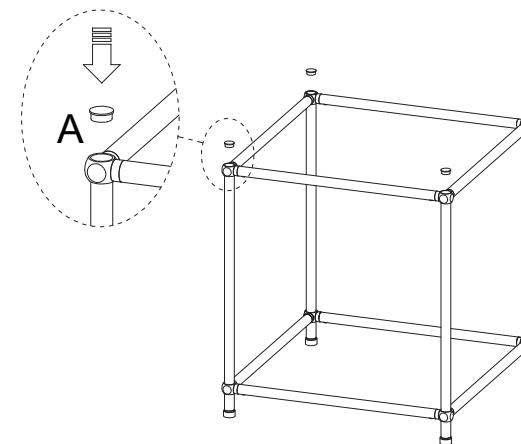

	(A)	4
--	-----	---


7

install panels ① x 2 by pressing them firmly into the frame.
Tip: press one corner of the panel into place first, then continue along the remaining corners.

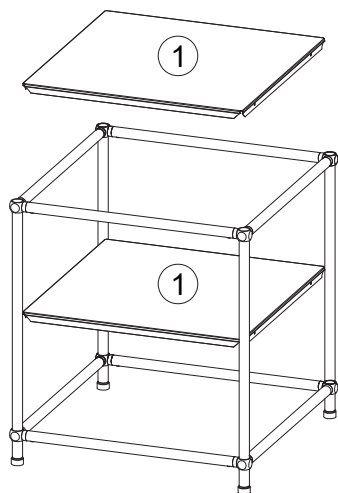


8

Adjust the feet (B) as need.

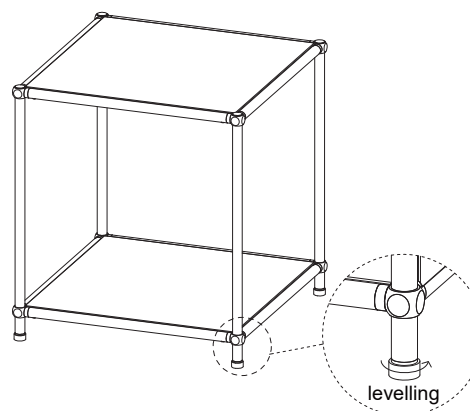

9

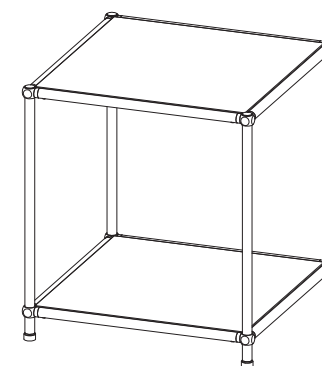

Unsere Marken:



Velvet Trading GmbH / Ost-West Handelsgesellschaft GmbH
www.floordirekt.com