
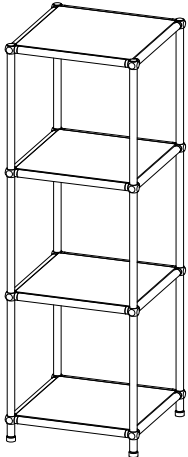



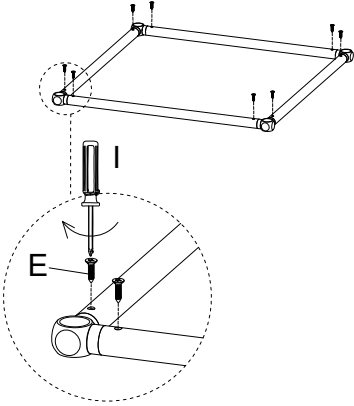
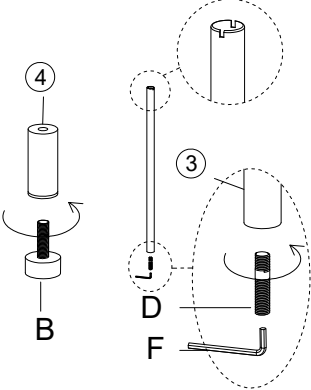
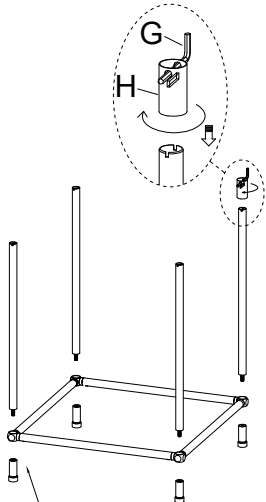
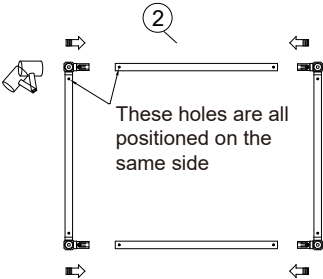


Concept Epure MK-005 	PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY
	①		4	(A)		4	(F)	 (M3)	1	(K)		4
	②		16	(B)		4	(G)	 (M4)	1	(L)	 ø4*30	4
	③		12	(C)	 M6*15	4	(H)		1	(M)		2
	④		4	(D)	 M6*27	12	(I)		1			
	⑤		16	(E)	 ø3*12	32	(J)		2			

STEP:


1 	3   (E) 32	4   (B) 4  (D) 12  (F) 1	5  These holes are facing downwards.  (H) 1  (G) 1
2  These holes are all positioned on the same side			

6

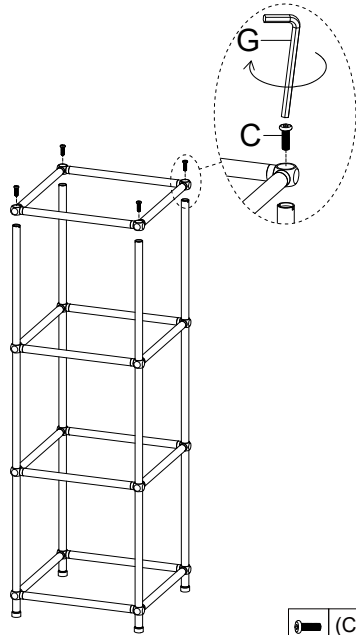

(C) 4


7

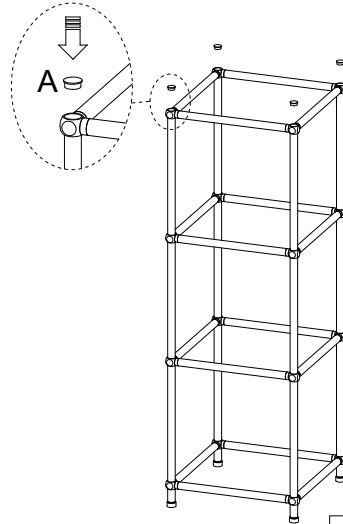

(A) 4


8

install panels ① x4 by pressing them firmly into the frame. Tip: press one corner of the panel into place first, then continue along the remaining corners.

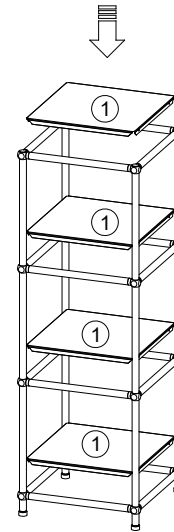

9


Adjust the feet (B) as need.

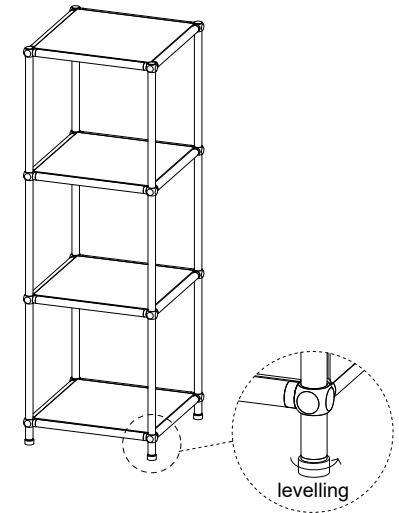

levelling


10

Anchoring advice: ensure the appropriate mounting screws and method are used based on the specific wall type.

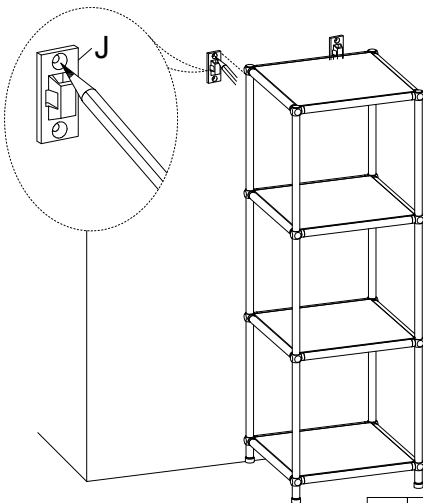


(J) 2

11

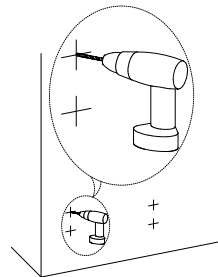


12

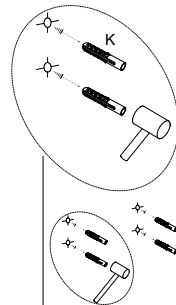


(K) 4

13

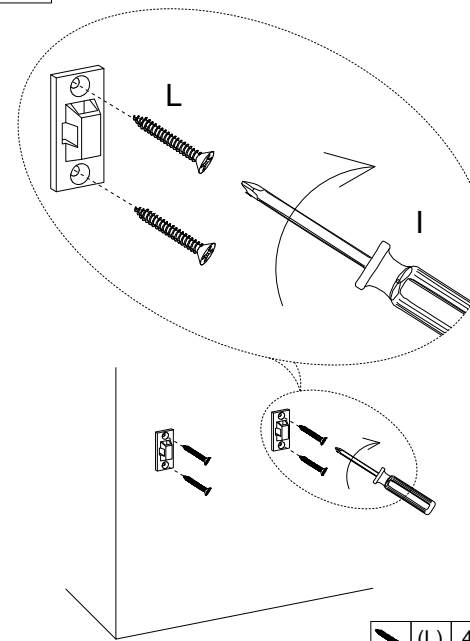

(L) 4

14

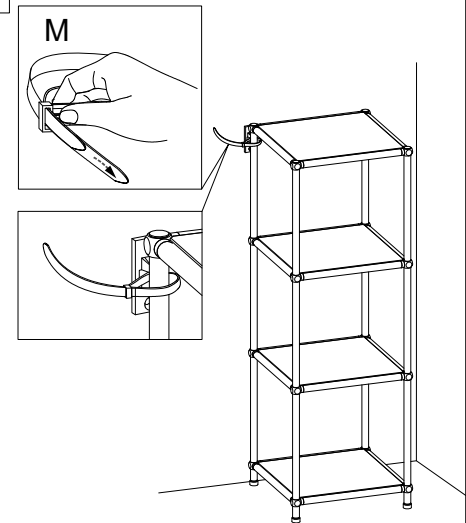

(M) 2