



INSTALLATION INSTRUCTION OF HERRINGBONE SPC FLOORING


incl. 1 mm **Perfect**Pad®

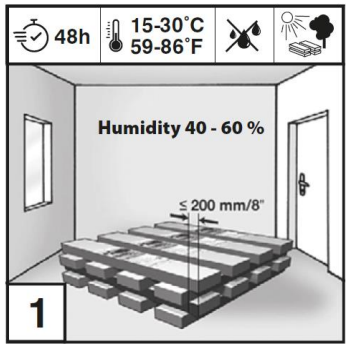


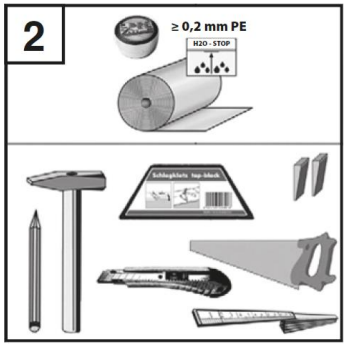


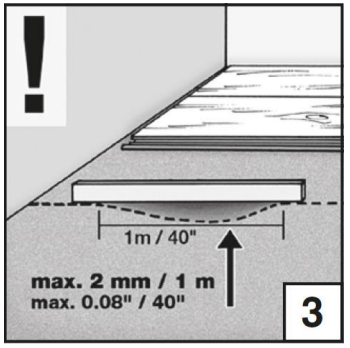


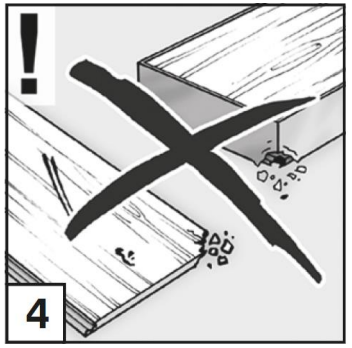

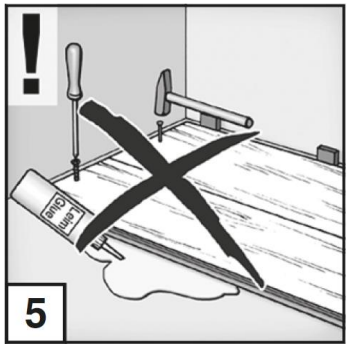


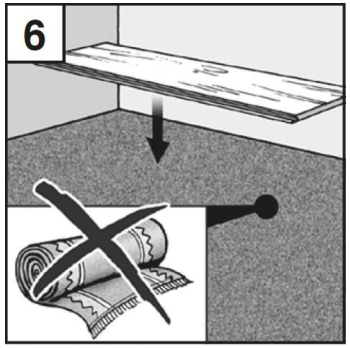


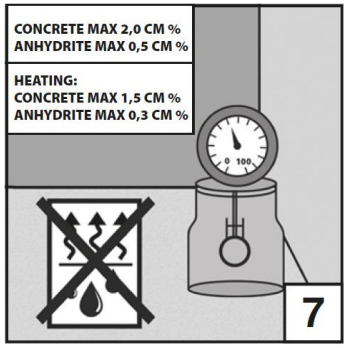


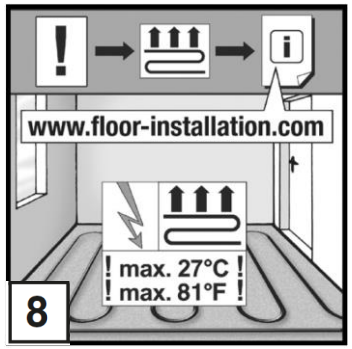





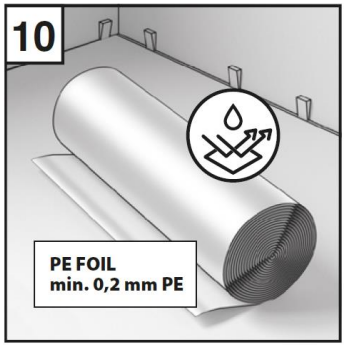


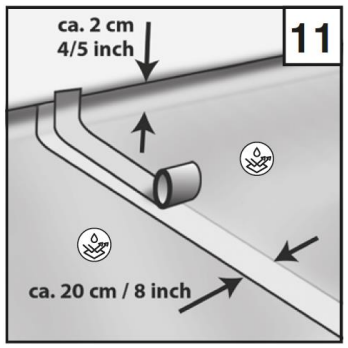

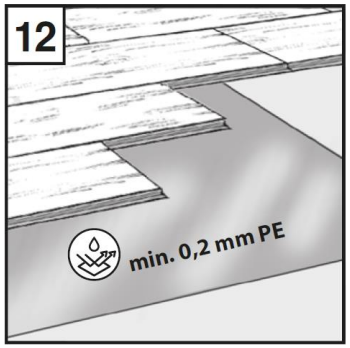

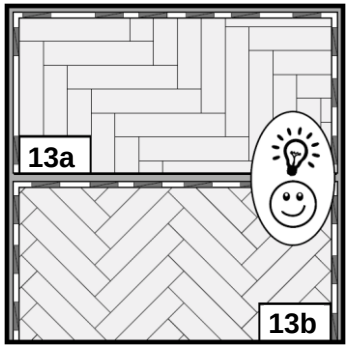


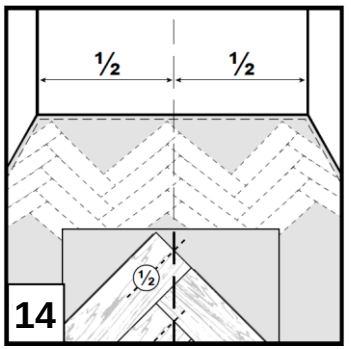


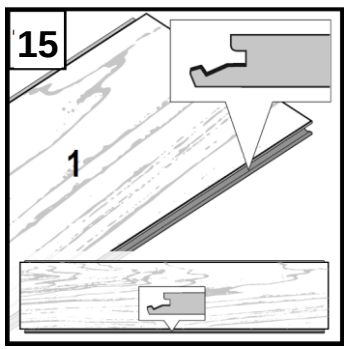



INSTALLATION INSTRUCTION OF HERRINGBONE SPC FLOORING


incl. 1 mm **Perfect**Pad®

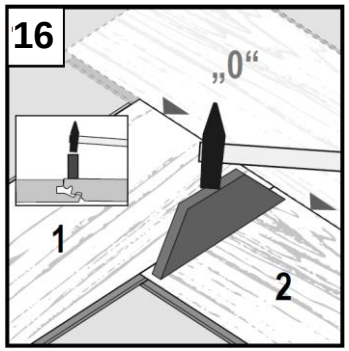


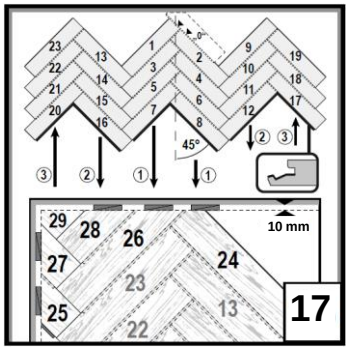


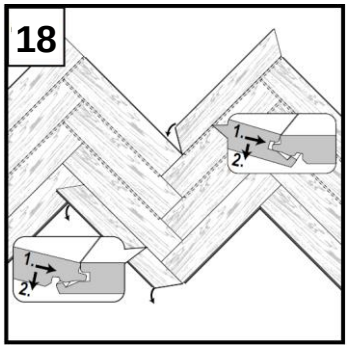


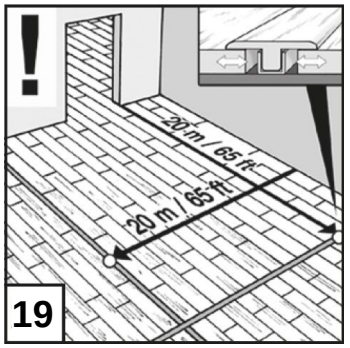


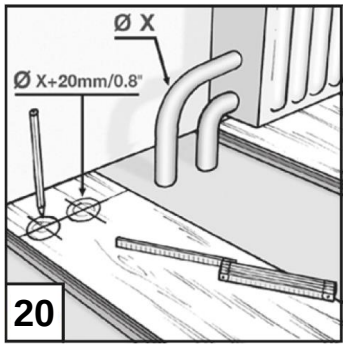


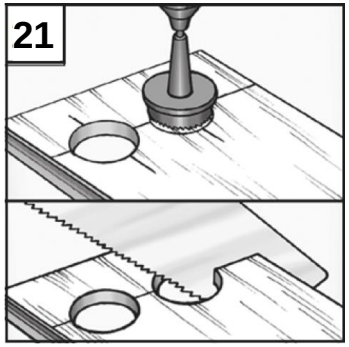

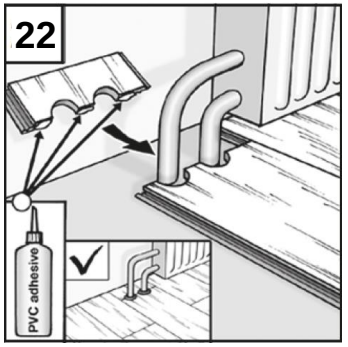

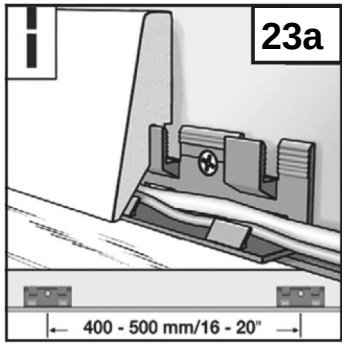


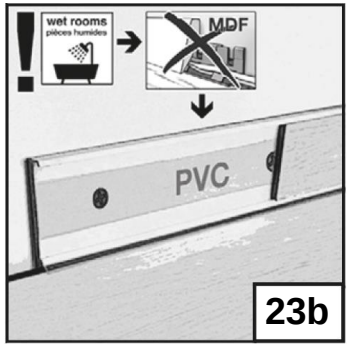

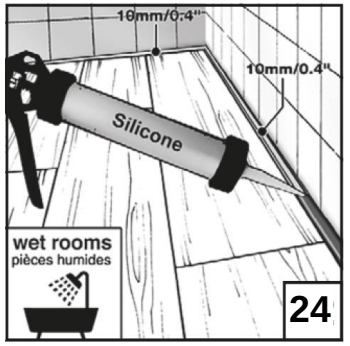





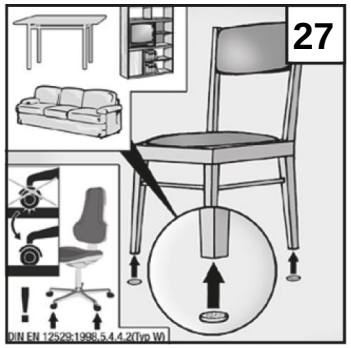

// EN: Before installing the floor, also refer to the online installation instructions: www.floor-installation.com

// NOTE: check all panels for defects before installation. Any panels with visual defects (visible from a height of 1,5m/ 5ft) should not be installed.