



Aufbauanleitung 309832 (BH) / 309801

Assembly instructions / Instructions de montage / Montagehandleiding

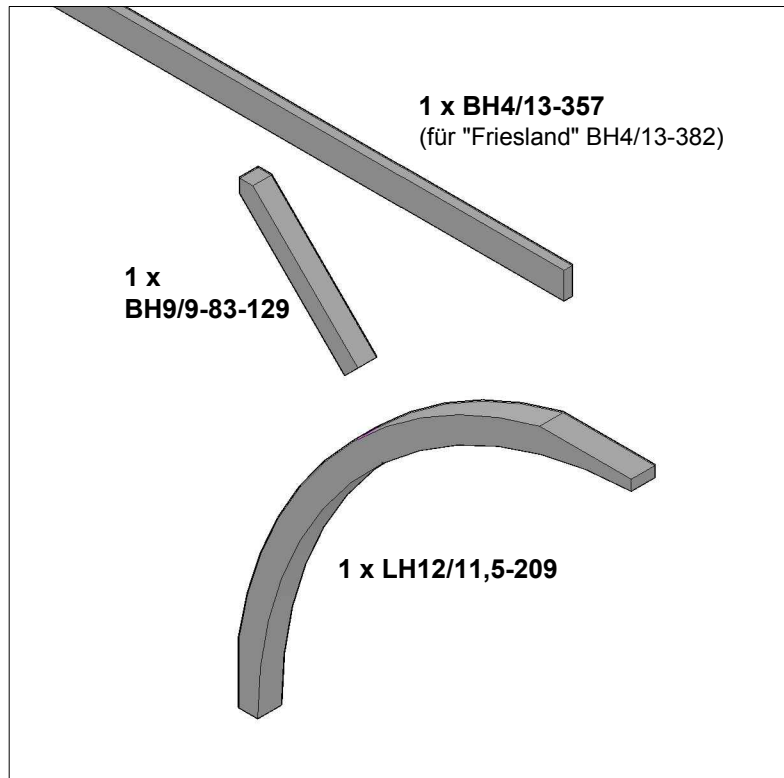


2 x C110-020		200mm, M10
2 x C110-022		220mm, M10
1 x C110-024		240mm, M10
3 x A110-39		M10
3 x C110-M10		M10
2 x C105-212		212cm
2 x C105-0120		120cm

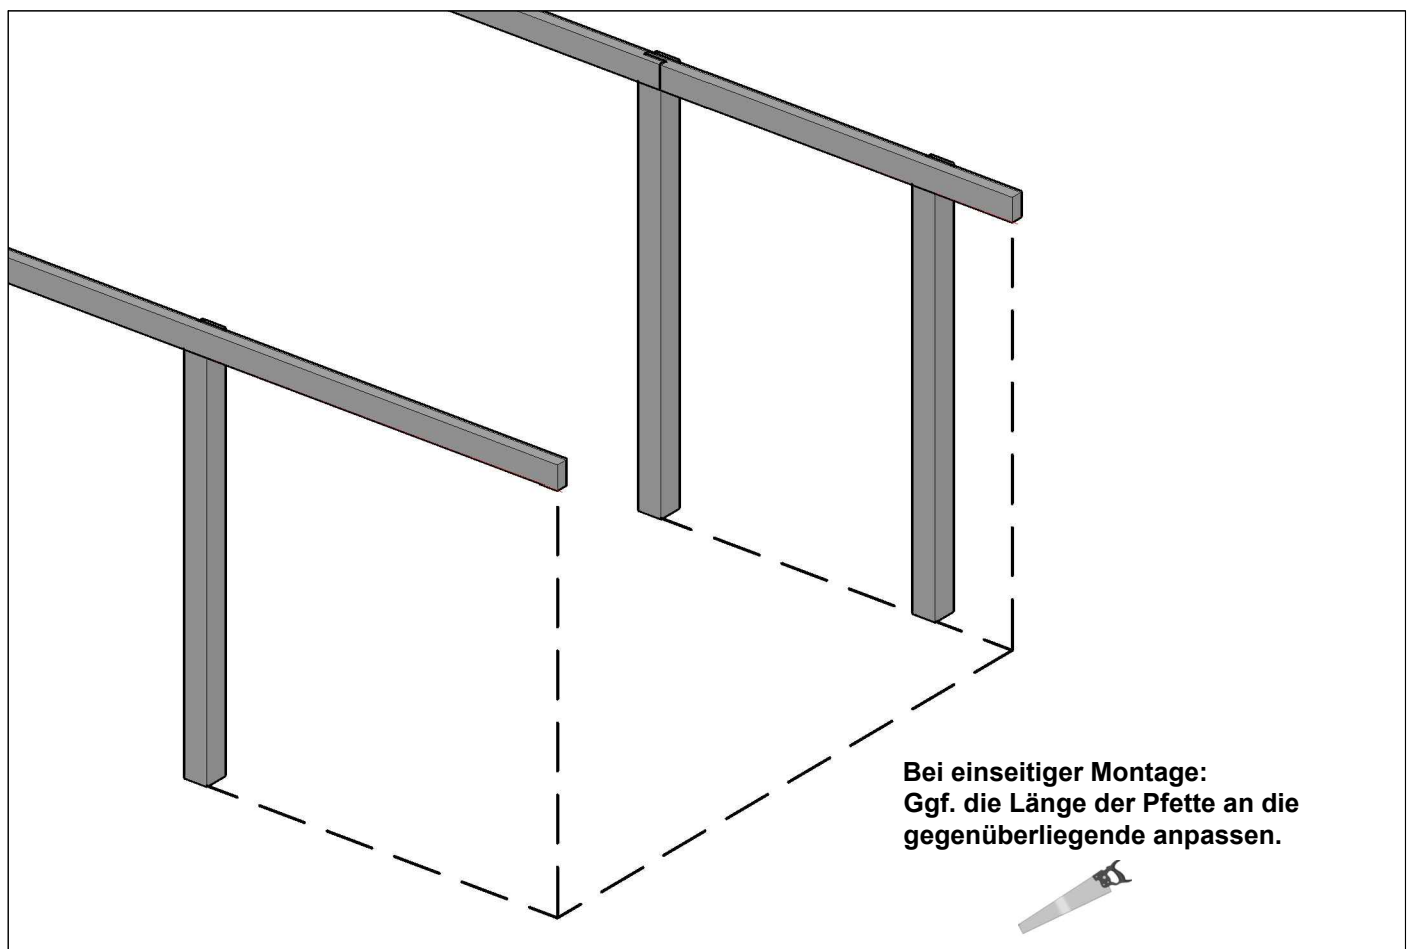

Aufbauanleitung 309832 (BH) / 309801

Assembly instructions / Instructions de montage / Montagehandleiding

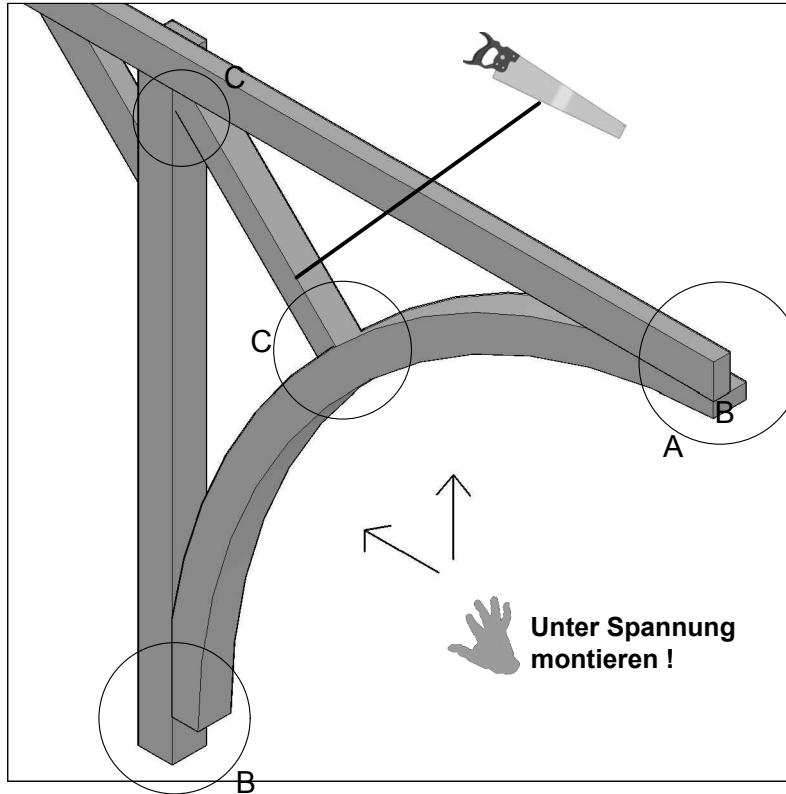

<p>A</p>	<p>1 x C110-020, 200mm </p> <p>1 x A110-39 </p> <p>1 x C110-M10 </p>	<p>9mm</p>
-----------------	--	------------

<p>B</p>	<p>für 9er Pfosten:</p> <p>1 x C110-022, 220mm </p> <p>1 x C110-020, 200mm </p> <p>für 12er Pfosten:</p> <p>1 x C110-024, 240mm </p> <p>1 x C110-022, 220mm </p> <p>2 x A110-39 </p> <p>2 x C110-M10 </p>	<p>10mm</p>
-----------------	---	-------------

<p>C</p>	<p>2 x C105-120, 120mm </p> <p>8mm</p>		<p>2 x C105-212, 212mm </p> <p>8mm</p>
-----------------	--	--	--