

Master-Slave-Steckdosenleiste Master-Slave socket outlet



Art. 18672



Bedienungsanleitung

Deutsch

Operating instructions

English

Technische Beschreibung der Master/Slave-Steckdose

Mit dem Ein-Ausschalten eines einzelnen Gerätes, welches in der MASTER-Steckdose eingesteckt ist, werden alle anderen Geräte die in den SLAVE-Steckdosen eingesteckt sind, automatisch mit ein- und ausgeschaltet.

Zum Beispiel kann ein Computer als Master-Gerät genutzt werden, und andere Geräte wie Drucker, Monitore, Modems etc. als Slave-Geräte die automatisch zugeschaltet werden.

Der Stromverbrauch des Master-Gerätes muss >5W im eingeschalteten Zustand sein und im ausgeschalteten Zustand (Standby) <100W. Der max. Stromverbrauch des Masters darf max. 500W sein.

Die Schallleistung wird mittels Knopfdruck automatisch eingestellt.

Wenn Sie vorübergehend die Master-Slave Funktion nicht benötigen, können Sie den Dauer-Modus für die Slave-Steckdosen aktivieren. Die Mehrfachsteckdosenleiste wirkt dann, als wenn die Master-Slave-Funktion nicht verfügbar wäre.

Die eingestellte Schallleistung der Master/Slave-Funktion oder der Dauermodus bleibt auch bestehend, wenn die Steckdosenleiste am Hauptschalter ausgeschaltet wird.

Einstellung

Automatische Schallleistung einstellen:

1. Stecken Sie die Master/Slave-Steckdose in eine Wand-Steckdose
2. Stecken Sie das Master-Gerät in die Master-Steckdose (blau)
3. Schalten Sie das Master-Gerät in den Standby-Modus oder schalten Sie dieses aus, wenn noch nicht getan.
4. Halten Sie an der Steckdosenleiste den „Learning Code“-Knopf für ca. 3 Sekunden gedrückt bis die Leuchte „Indicator“ anfängt zu blinken.
5. Die „Indicator“-Leuchte blinkt nun für ca. 5-10 Sekunden. Während dieser Zeit wird der Standby-Verbrauch des Master-Gerätes automatisch ermittelt und die Schallleistung gespeichert.
6. Wenn die Leuchte „Indicator“ aufhört zu blinken ist die Einstellung beendet. Die Master/Slave-Funktion kann jetzt benutzt werden.

Dauerzustand einstellen:

Aktivierung

Gehen Sie wie bei der automatischen Einstellung der Schallleistung vor.

Während der Phase wo die Leuchte „Indicator“ blinkt (Schritt 5) drücken Sie die „Learning Code“-Taste erneut für ca. 3 Sekunden. Die Steckdosenleiste wurde in den Dauerzustand geschaltet und die Slave-Steckdosen sind aktiviert.

Deaktivierung:

Wiederholen Sie einfach die Schritte 1-6 des Einstellens der automatischen Schallleistung.

Technische Daten:

Nennspannung:	230V/50Hz
Max. Belastung:	16A / 3500W (für Master und Slave Dosen zusammen)
Bereich Schallleistung:	Master max. 500W
Einstellung Schallleistung:	automatische Einstellung per Knopfdruck
Dauerbetrieb:	Aktivierung mittels Knopfdruck
Ermittlung Null-Strom:	Relais schaltet nur während der Null-Durchgangszeit
Standby-Verbrauch:	<0,9W

Nicht hintereinander stecken!

Nicht abgedeckt betreiben!

Technical description of digital Master-Slave

With the switching on/off of one single device, which is plugged into the master socket, all further appliances in the slave sockets can also be automatically switched on/off. For example, you can use a computer as a master device, which can embrace slave appliances in the automatic control such as, for example, monitor, printer, modem etc. The power consumption of the master device must be >5W in the energized condition and in the de-energized condition (standby operation) it must be <100W. Master can be max. 500W
The switching threshold of this model is automatically set by the push of a button.
If you temporarily do not require the master slave function, you may activate the permanent mode for the slave sockets. The multiple socket then acts as if the master slave function was not available.
The switching threshold saved, or the permanent mode, also remains if the master slave multiple socket is temporarily switched off at the main switch.

Setup

Automatic threshold switching setting:

1. Switch on the master slave multiple socket at the main switch.
2. Plug the master device into the master socket.
3. Set the master device to the standby mode, or switched off mode, if this is not already done.
4. On the master slave module, keep the "Learn" button pressed for approx. 3 secs., until the "Slave on" lamp begins to flash.
5. The "Slave on" lamp now flashes for approx. 5-10 secs. During this time, the standby current consumption of the master device is automatically determined and the switching threshold is saved
6. When the lamp "Slave on" stops flashing, the setting process is finished.
The master slave function can now be used.

Permanent mode for the slave sockets:

Activation

- Proceed as for the automatic setting of the switching threshold.
- During the time that the "Slave on" lamp flashes (Point 5), push the button "Learn" again for approx. 3 secs. The automatic switching threshold setting is finished and the permanent mode for the slave sockets is activated.

Deactivation

- Simply carry out an automatic switching threshold setting again.


Technical data

- Nominal voltage: 230V / 50Hz
- Max. load: 16A (3500W) for master and for slave sockets together
- Switching threshold range: Master max 500W
- Switching threshold adjustment: Automatic adjustment by push button (see Setup)
- Permanent mode: Activation by push button (see Setup)
- Zero crossing detection: Relay switching only during zero crossing time
- Standby power: <0,9W

Konformitätserklärung

Hiermit erklärt die as - Schwabe GmbH, dass sich das Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Niederspannungsrichtlinie 2014/35/EU befindet.", Die Vollständige Konformitätserklärung kann auf dem Postweg unter der Adresse: **as - Schwabe GmbH, Merkurstr. 10, 72184 Eutingen** oder per Email unter **info@as-schwabe.de** oder im Downloadbereich der Webseite **www.as-schwabe.de** angefordert werden.

Innerhalb der EU weist dieses Symbol darauf hin, dass dieses Produkt nicht über den Hausmüll entsorgt werden darf. Altgeräte enthalten wertvolle recyclingfähige Materialien, die einer Verwertung zugeführt werden sollten und um der Umwelt bzw. der menschlichen Gesundheit nicht durch unkontrollierte Müllbeseitigung zu schaden. Bitte entsorgen Sie Altgeräte deshalb über geeignete Sammelsysteme oder senden Sie das Gerät zur Entsorgung an die Stelle, bei der Sie es gekauft haben. Diese wird dann das Gerät der stofflichen Verwertung zuführen .

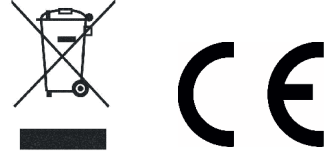

Declaration of Conformity

Hereby we declare, that this product complies with the essential requirements of the LV Directive 2014/35/EU the complete declaration of conformity can be ordered on postal way at: **as - Schwabe GmbH, Merkurstr. 10, 72184 Eutingen** or by email at **info@as-schwabe.de**



Protecting the environment

Should you find one day that your appliance needs to be replaced or if it is of no further use to you, think of the protection of the environment:

- 1) Do not dispose your appliance along with the rest of the public waste (this is also the meaning of the shown recycling sign).
- 2) Contact your Public Authorities and they will instruct you of the recycling centers to which your appliances must be disposed.
- 3) Correct disposal of your appliance helps the protection of the environment as well as the recycling of the appliance components.
- 4) The electrical appliances due to their construction materials, if not correctly disposed, may lead to environmental and furthermore health hazards.